

BAR42


**COFFEE MACHINE
MACHINE A CAFE
CAFETERA ELÉCTRICA
CAFETEIRA ELÉTRICA**


























**Owner's instructions
Mode d'emploi
Instrucciones para el uso
Manual de instruções**



**READ AND SAVE THESE INSTRUCTIONS
LISEZ ET GARDEZ CES INSTRUCTIONS
REPASE Y GUARDE ESTAS INSTRUCCIONES**

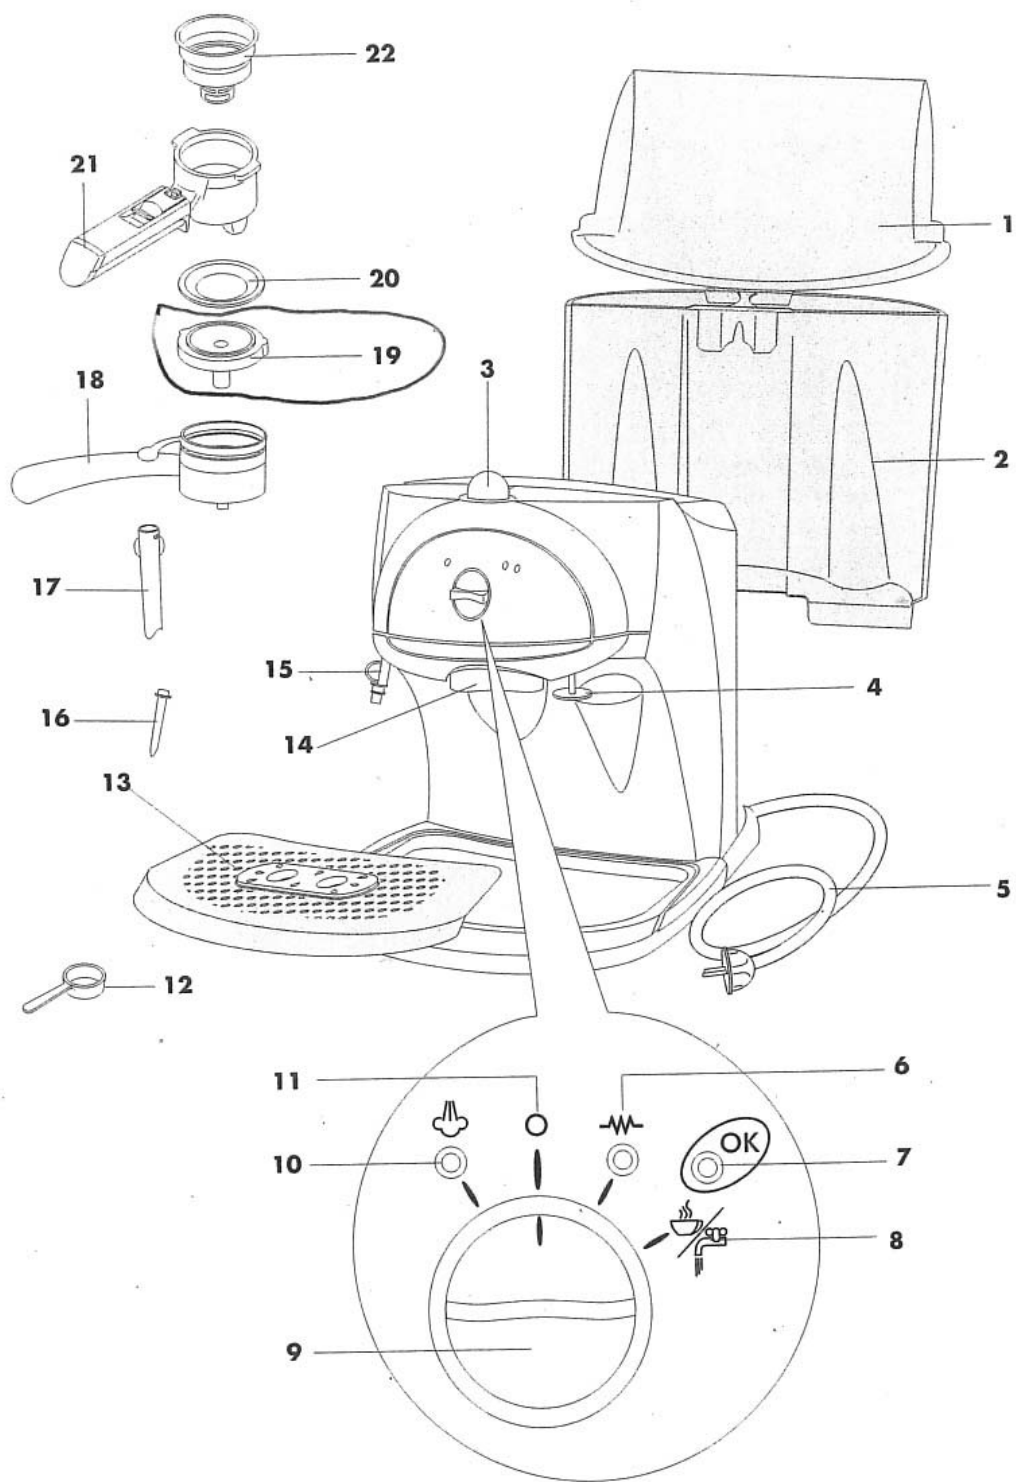

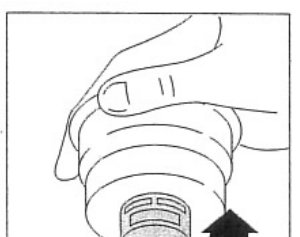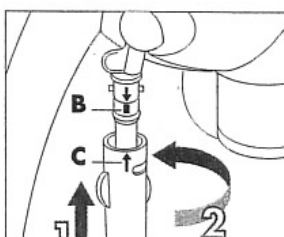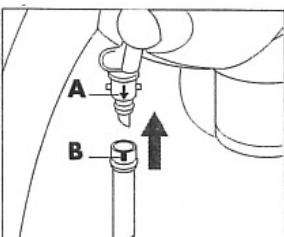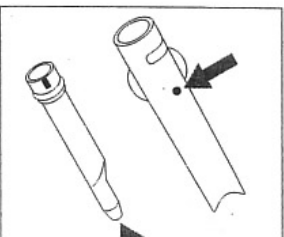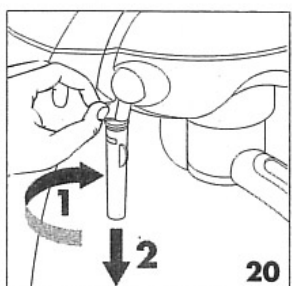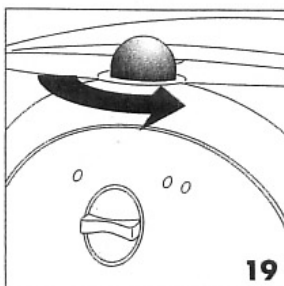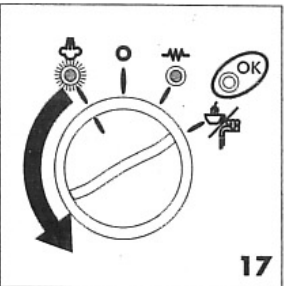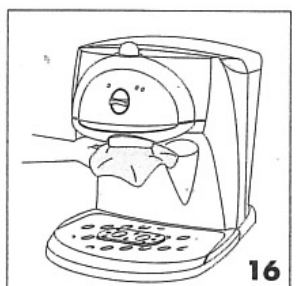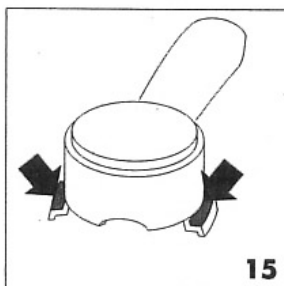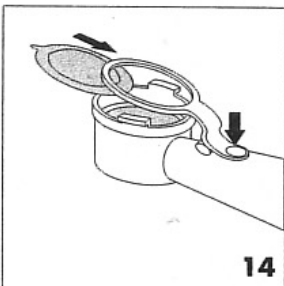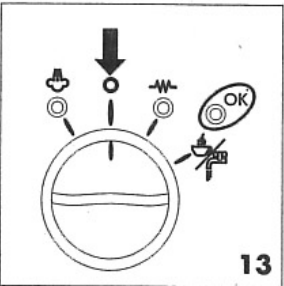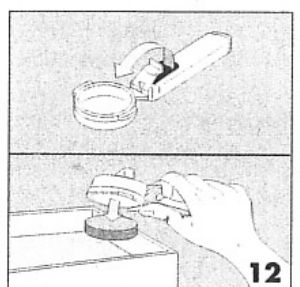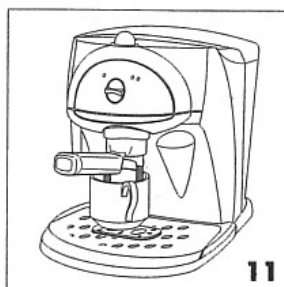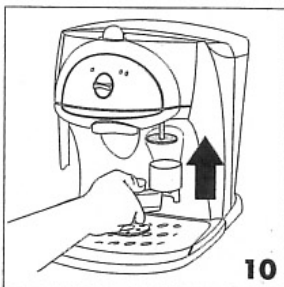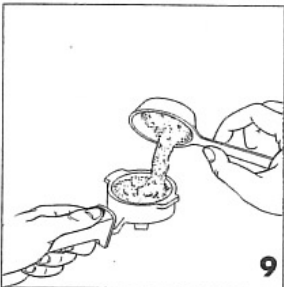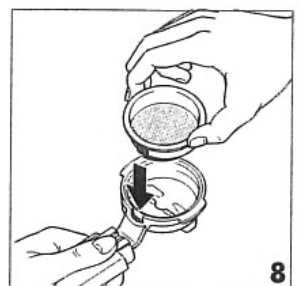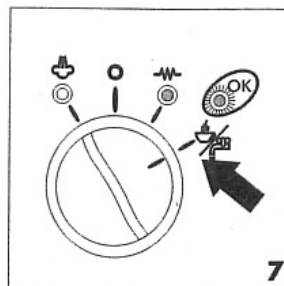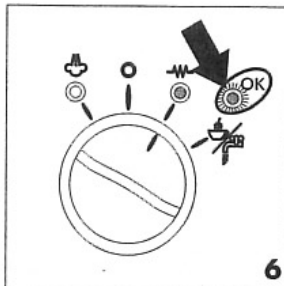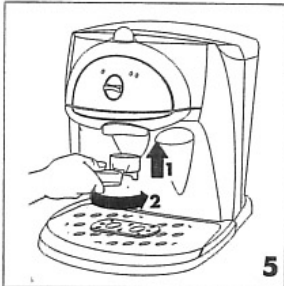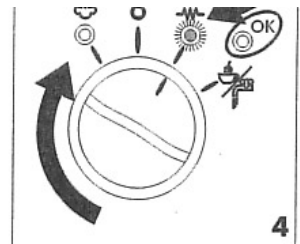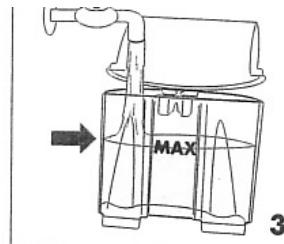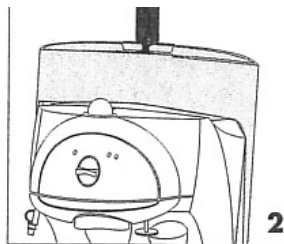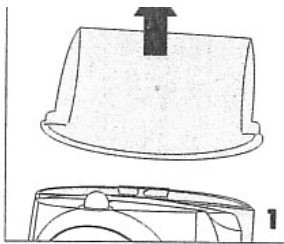



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.
- Never allow the appliance to be used by children or unfit persons.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before fitting or taking off parts, and before cleaning the appliance.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments or spare parts not recommended by the appliance manufacturer may result in fire, electrical shock or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electrical burner, or in a heated oven.
- Plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than the intended use. This appliance is to be utilised for domestic use only. Any other use is to be considered improper and therefore, dangerous.
- DO NOT unscrew or remove boiler cap while the machine is in operation. Wait until brewing cycle is completed and all water and steam has been used up.

SAVE THESE INSTRUCTIONS
THIS PRODUCT IS FOR HOUSEHOLD USE ONLY




SHORT CORD INSTRUCTIONS

- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer, detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. If the appliance is provided with 3-wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.
- Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Thank you for choosing this coffee machine. To get the very best out of your new coffee machine it is advisable to read these instructions before using the appliance. This is the only way to ensure optimum results and maximum safety.

DESCRIPTION OF THE APPLIANCE

The following terms are used throughout the instruction manual

- 1 Lid for water tank
- 2 Water tank
- 3 Steam release knob
- 4 Coffee tamper
- 5 Power supply cable
- 6 Boiler on function 
- 7 'OK' light
- 8 Espresso function 
- 9 Selector knob
- 10  Cappuccino function (for milk frothing)
- 11 "O" OFF position
- 12 Coffee measuring spoon
- 13 Removable drip tray - black area inside for positioning cups
- 14 Boiler outlet
- 15 Delivery tube
- 16 Steam nozzle
- 17 Milk frother
- 18 Filter holder for pods (if fitted)
- 19 Frother for pods (if fitted)
- 20 Filter for pods (if fitted)
- 21 Filter holder for coffee
- 22 Filter for coffee with frother

SAFETY WARNINGS

- This machine has been built to "make coffee" and to "reheat beverages"; please be careful to avoid burns from the sprays of hot water or steam and avoid any improper use.
- When the appliance is in use, do not touch any of the machine's hot surfaces.
- After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use the appliance and seek the advice of a qualified service professional.
- Packaging materials (plastic bags, foam polystyrene, etc.) should not be left within the reach of children as this could be a potential source of danger.
- This appliance is to be utilised for domestic use only. Any other use is to be considered improper and therefore, dangerous.

- The manufacturer takes no responsibility for damage derived from improper use.
- Never touch the appliance with wet or damp hands.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- In case of breakdown or malfunctioning, turn off the appliance immediately and do not touch it. For repairs, please contact a Service Centre authorized by the manufacturer and request the use of original replacement parts only. The lack of respect for this point may compromise the safe use of the appliance.
- The power supply cable of this appliance must never be replaced by the user, because its replacement requires the use of special tools. If the cable should become damaged, or in case it needs to be replaced, please go to a Service Centre authorized by the manufacturer.
- When the appliance is not in use, turn off and disconnect the plug from the socket.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

INSTALLATION

- Place the coffee maker on flat work surface at a safe distance from taps and sinks.
- Check that the voltage corresponds to that indicated on the appliance rating plate. The appliance must always be connected to a well-earthed socket rated at 10 A minimum. The manufacturer is not liable for damage caused by inadequate earthing of the appliance.
- In the event of incompatibility between the plug on the appliance and the socket, have the plug replaced with another of the right type by a qualified professional.
If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only.
- Never install the machine in an environment that can reach a temperature less than or equal to 0°C (if the water in it freezes, the coffee maker may be damaged).
- When the machine is in operation, any additional cable can be stored in the machine by inserting it back into the cable supply outlet.

HOW TO PREPARE ESPRESSO COFFEE


FILLING THE WATER TANK:

To remove the water tank simply pull upwards (fig. 2) and fill the tank at the sink (fig. 3). Do not exceed the MAX level on the water tank. The tank may also be filled without removing it, simply by pouring water into it directly from a jug.

 


Replace the tank by connecting the valve at the bottom of the tank with the hole in the base on the machine.

Note: Do not operate the appliance without water in the tank and always remember to fill the tank when the water level goes below the MIN level.

PREHEATING THE COFFEE MACHINE

To obtain espresso coffee at the right temperature, the coffee maker must be preheated. So we suggest to turn the selector knob to the  position (fig. 4) at least half an hour before making the coffee, making sure the filter holder is attached to the appliance (check that the steam release knob is closed). To attach the filter holder, place it under the boiler outlet with the handle towards the left (fig. 5). Push upwards and at the same time turn the handle as far to the right as possible. To avoid leaks of water, rotate firmly. After half an hour, make coffee following the instructions of the next paragraph.

Alternatively, for a faster operation, proceed as follows:

1. Turn the selector knob so that the indented line on the selector knob points to the boiler on function  (fig. 4). Attach the empty filter holder (**without coffee**) to the machine.
2. Position a cup under the filter holder. Use the same cup that the coffee will be served in, so that it may be preheated.
3. Wait until the orange "OK" light comes on (fig. 6) and turn the selector knob to the espresso function  position (fig. 7). Allow water to flow until the orange "OK" light goes out, then stop the flow of water by turning the selector knob to the boiler on function  (fig. 4).
4. Empty the cup, wait until the "OK" pilot light comes on again and repeat the whole operation one more time.

(It is normal for a small and harmless puff of steam to be given off when removing the filter holder).

HOW TO PREPARE ESPRESSO COFFEE USING THE FILTER HOLDER FOR GROUND COFFEE

1. After preheating the appliance as described in the above paragraph, insert the ground coffee filter with frother into the filter holder, making sure the tab is correctly inserted into the housing as shown in fig. 8.

2. To prepare a single coffee, fill the filter with a level measure of ground coffee, about 7 g (fig. 9). To prepare two coffees, use the filter and fill with two loosely filled measures of ground coffee (about 6+6 g). Fill the filter in small doses to prevent the ground coffee from overflowing.

IMPORTANT: For correct operation, before adding the ground coffee to the filter holder, make sure the filter is free from ground coffee from the previous infusion.



3. Distribute the ground coffee uniformly and press it lightly with the pressing pad (Fig. 10).

NOTE: Pressing the coffee is very important in order to prepare a good coffee. However if you press too hard, coffee will come out slowly and cream will be of a dark colour. If you press too light, coffee will come out too fast and cream will be a very light color.

3. Remove any excess coffee from the rim of the filter holder and attach the filter holder to the appliance.

Rotate firmly (fig. 5) to avoid leaks of water.

4. Place the cup or cups (cups can be preheated by rinsing under hot water) on the black part of the removable drip tray (fig. 11). Ensure that the cup or cups line up with the dispensing holes on the filter holder.

5. Wait until the "OK" light comes on (fig. 6) then turn the selector knob to the espresso function  (fig. 7) until the desired quantity of coffee is obtained. To stop the delivery, turn the selector to the  position.

6. To detach the filter holder, turn the handle from right to left.

To avoid any splashing, do not detach the filter holder while the machine is dispensing coffee.

7. To remove the used coffee, hold the filter locked with the special lever that is built into the handle and let the coffee fall out by knocking the overturned filter holder (Fig. 12).

8. To switch off the coffee machine, turn the selector knob on the appliance to the OFF position "O" (fig. 13)

ATTENTION: The first time that coffee is prepared, it is necessary to wash all of the accessories and the internal circuits of the machine, preparing at least five coffees without using the ground coffee.

HOW TO PREPARE COFFEE USING THE FILTER HOLDER FOR PODS (if fitted)

1. Preheat the machine as described in the 'Preheating the Coffee Machine' section, making sure to leave the filter holder attached to the unit. Following this procedure ensures that the coffee is delivered at a hotter temperature.

2. Press the filter holder button and insert the pod into the filter (fig 14).

Note: Use pods which conform to the ESE standard: this will be indicated on the packaging by the following symbol:



The ESE standard is a system accepted by the leading coffee pod manufacturers, and allows espresso coffee to be prepared simply and without any mess.

3. Attach the filter holder onto the machine, moving from left to right (fig 5).


Note: to ensure effective closure and avoid leaks of water from the rim of the filter holder, you are recommended to grease the bottom of the lateral tabs from time to time with butter or oil (as shown in fig. 15).

IMPORTANT: Should the coffee holder for pods be used after one for ground coffee, it's necessary to clear the ground coffee remained in the espresso boiler outlet (fig. 16). This cleaning operation is necessary in order to avoid water leakages from the coffee holder for pods while coffee is being prepared.

4. Proceed as in points 4, 5 and 6 of the previous paragraph (how to prepare espresso coffee using the filter holder for ground coffee).

5. To remove the pod, press the button on the filter holder and simply lift the pod out

6. To turn the coffee machine off, turn the selector knob on the appliance to the Off position "O" (fig 13).

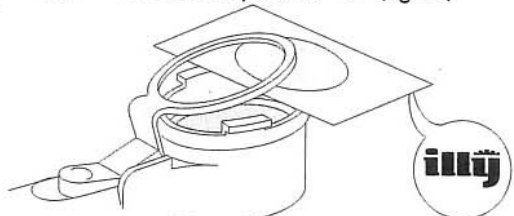

If you use the "illycaffè" coffee pods, use the special filter holder. Insert the coffee pod ensuring the name "illy" is facing down and the long side of the pod is positioned as shown in figure.

HOW TO MAKE CAPPUCCINO

1. Prepare espresso coffee, using cups that are large enough for cappuccinos

2. Turn the selector knob to the ☞ position (fig. 17) and wait until the "OK" light comes on (fig. 6) to indicate that the boiler has reached the ideal temperature for producing steam.

3. In the meantime, fill a container with approximately 100 gr. of milk for each cappuccino to be prepared. The milk must be cold from the refrigerator (not warm!). In choosing the container, bear in mind that the volume of the milk will increase by 2 or 3 times.

NOTE: We suggest you used semi-skimmed milk at refrigerator temperature.

4. Position the container with the milk in it under the milk frother (fig 18).

5. Immerse the cappuccino maker nozzle about 2 cm deep into the milk and turn the steam knob in an anti-clockwise direction (fig. 17) (by turning the knob to a greater or lesser extent, it is possible to vary the quantity of steam that comes out from the cappuccino maker). At this point, the milk will begin to increase in volume and to appear frothy.

6. Once the desired temperature has been reached (the ideal temperature is 60°C), stop the delivery of steam by turning the steam knob in a clockwise direction and at the same time positioning the selector knob at "O" (fig. 13).

7. Pour the frothed milk into the cups containing the espresso coffee. Your cappuccino is now ready. Add sugar to taste and, if desired, sprinkle a little powdered chocolate on top of the froth.

Note: to prepare more than one cappuccino, first make all the coffees then at the end prepare the frothed milk for all the cappuccinos.

IMPORTANT: always clean the milk frother and steam nozzle immediately after use. Proceed as follows:

1. By turning the steam knob (fig. 19), allow a little steam to come out for a few seconds. Then close firmly by turning clockwise.

2. Hold the upper part tight with one hand and use your other hand to unscrew the cappuccino maker, rotating it in a clockwise direction, and remove it from the nozzle (fig. 20).



3. Remove the steam nozzle by sliding it off the delivery tube.

4. Wash the cappuccino maker and steam nozzle thoroughly with warm water.

5. Check that the two holes shown in fig. 21 are not blocked. If necessary, clean them with the help of a pin

6. Re-attach the steam nozzle by inserting it into the steam tube and aligning the 'A' arrow with the 'B' notch, as indicated in figure 22.
7. Re-attach the cappuccino maker by sliding it all the way into the steam nozzle, aligning the 'C' arrow with the 'B' notch, as shown in figure 23, and then turning it in an anti-clockwise direction.

PRODUCING HOT WATER

1. Turn on the coffee unit by turning the selector knob to the  position (fig. 4).
2. Position a container under the cappuccino maker.
3. When the 'OK' pilot light comes on, position the selector knob at  (fig. 7) and at the same time turn the steam knob in an anti-clockwise direction (fig. 19); hot water will come out from the cappuccino maker.
4. To stop the flow of hot water, turn the steam knob in a clockwise direction and position the selector knob at "O"

CLEANING AND MAINTENANCE

CLEANING THE FILTER HOLDER FOR GROUND COFFEE

About every 300 coffees, clean the filter holder for ground coffee as follows:

- Remove the filter with the frother;
- Clean the inside of the filter holder. Never wash in a dishwasher.
- Unscrew the cap of the frother (fig. 24) by rotating in the direction indicated by the arrow on the cap.
- Remove the frother from the container by pushing it from the cap end.
- Remove the gasket.
- Rinse all components and clean the metal filter thoroughly in hot water using a brush (fig. 25). Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (see fig. 26).
- Replace the filter and gasket on the plastic disk as shown in figure 27. Make sure to insert the pin on the plastic disk into the hole in the gasket indicated by the arrow in fig. 27.
- Replace the assembly into the steel filter container (fig. 28), making sure the pin is inserted into the hole in the support (see arrow in fig. 28).
- Finally, screw on the cap.

Failure to clean as described above invalidates the guarantee.

CLEANING THE FILTER HOLDER FOR PODS (IF SUPPLIED)

About every 300 coffees, clean the filter holder for pods as follows:

- Push the filter holder button, remove the filter (fig. 29) and the frother if fitted. Clean the inside of the filter holder. Never wash in a dishwasher.
- Remove the gasket from the frother and rinse all components with water. Make sure the holes indicated with the arrows in fig. 30 are not blocked. If necessary, clean with a pin.
- Replace the gasket on the frother and replace the assembly in the filter holder. Make sure the tabs of the frother are aligned with the recesses on the filter holder (fig. 31).
- Clean the filter thoroughly in hot water using a brush. Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (see fig. 26).
- Replace the filter.

Failure to clean as described above invalidates the guarantee.

CLEANING THE ESPRESSO BOILER OUTLET

At least twice a year, the espresso boiler outlet must be cleaned as follows:

- check that the coffee machine is not warm and the plug is detached from the mains;
- using a screwdriver, unscrew the screw that holds the outlet of the espresso boiler (fig. 32);
- Clean the boiler with a damp cloth (fig. 16);
- Clean the outlet thoroughly in hot water using a brush. Make sure the holes are not blocked. If necessary, clean with a pin.
- rinse the outlet under the tap, still scrubbing it;
- replace the outlet of the espresso boiler.

Failure to clean as described above invalidates the guarantee.





OTHER CLEANING OPERATIONS

1. Do not use solvents or detergents in cleaning the coffee maker. Use a soft, damp cloth.
2. Remove the drip-trays, empty them and wash them periodically

ATTENTION: during cleaning, never immerse the unit in water – it is an electrical appliance.

DESCALING

It is advisable to clean the calcium from the machine every 300 cups of coffee. It is recommended that specific (store-bought) products for descaling of espresso coffee machines be used. If such products are not available, it is possible to proceed as follows:

1. Fill the tank with water using 1 liter of water;
2. Dissolve 2 spoonfuls (about 30 grams) of citric acid in the water (available from chemists);
3. Turn the selector knob to the  position and wait until the 'OK' light comes on.
4. Check that the filter holder is not attached and place a container under the outlet of the machine;
5. Turn the selector knob to the  position and allow half of the solution in the tank to flow out. Then stop the flow by turning the selector to the "O" position.
6. Allow the solution to act for about 15 minutes, then start up the flow again until the tank is completely empty;
7. To eliminate the remains of the solution and the calcium, rinse the tank well, fill it with clean water and replace.
8. Turn the selector knob to the  position and allow all of the remaining solution in the tank to flow out.
9. Turn the selector knob to the  position and repeat operations 7 and 8 one more time.

Repairs for malfunctioning caused by problems of calcium build-up are not covered by the guarantee if the descaling process described above is not carried out regularly.

PROBLEM

POSSIBLE CAUSES

SOLUTION

Espresso coffee no longer comes out.

- Lack of water in the tank.
- The holes in the filter holder are blocked.
- The outlet of the espresso boiler is blocked.
- The tank is badly inserted and the valve at the bottom is not open.

- Fill the water tank.
- Clean the holes in the spouts.
- Clean as indicated in the "Cleaning the espresso boiler outlet" section.
- Press the tank lightly so as to open the valve at the bottom.

Espresso coffee drips from the edges of the filter holder, instead of from its holes.

- The filter holder is badly inserted.
- The gasket of the espresso boiler has lost elasticity.
- The holes in the filter holder are blocked.

- Attach the filter holder correctly by rotating firmly as far as it will go.
- Have the espresso boiler gasket replaced at an Service Centre
- Clean the holes in the filter holder.

The espresso coffee is cold.

- The 'OK' pilot light was not on when the coffee delivery switch was pressed.
- The preheating was not carried out.
- The cups were not preheated.

- Wait until the OK pilot light comes on.
- Carry out the preheating as indicated in the "Preheating the coffee unit" section.
- Preheat the cups by rinsing them in hot water.

The pump is too noisy.

- The water tank is empty.
- The tank is inserted wrongly and the valve at the bottom is not open.

- Fill the tank.
- Press the tank lightly so as to open the valve at the bottom.

The coffee cream is light-coloured (the coffee comes out quickly from the spout).

- The ground coffee has not been pressed enough.
- The quantity of ground coffee is scarce.
- The coffee is not ground finely enough.

- Tamp the ground coffee down more.
- Increase the quantity of coffee.
- Only use coffee specifically ground for espresso coffee machines.

The coffee cream is dark (the coffee comes out slowly from the spout).

- The ground coffee is too tightly pressed.
- The quantity of ground coffee is too much.
- The espresso boiler outlet is blocked.

- Press the coffee less.
- Decrease the quantity of ground coffee.
- Clean the outlet as described in "Cleaning the espresso boiler outlet" section.
- Only use coffee specifically ground for espresso coffee machines.

The coffee has an acidic taste.

- The unit was not sufficiently rinsed after the descaling process procedure.

- Rinse the unit as described in the "descaling" section.

The milk does not froth when making a cappuccino.

- The milk is not cold enough.
- The cappuccino maker is dirty.

- Always use milk at refrigerator temperature.
- Carefully clean the pinholes in the milk frother

DeLonghi

Limited Warranty

What Does This Warranty Cover? We warrant each Espresso Coffee Machine to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers, of any defective part or parts there of other than parts damaged in transit, which shall be returned to us, transportation prepaid. This warranty shall apply only if the Espresso Coffee Machine is used in accordance with the factory directions which accompany it.

How Long Does The Coverage Last? This warranty runs for one year from the date of delivery and applies only to the original purchaser.

What Does This Warranty Not Cover? This warranty does not cover defects or damage of the Espresso Coffee Machine which result from repairs or alterations to the machine outside our factory or authorized service centers, nor shall it apply to any Espresso Coffee Machine which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damages resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

How Do You Get Service? If repairs become necessary or spare parts are needed, please write to:

DeLonghi America Inc.
Park 80 West Plaza One, 4th floor
Saddle Brook NJ 07663
or call Service Tel. No 1-800-322-3848

or visit our internet site:
www.delonghiusa.com

The above warranty is in lieu of all other express warranties and representations; All implied warranties are limited to the applicable warranty period set forth above. This limitation does apply if you enter into an extended warranty with DeLonghi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions connection with the sale or use of its Espresso Coffee Machine.

How Does State Law Apply? This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

DeLonghi

GARANTIE

Nous garantissons que tous les APPAREILS ELECTRIQUES DE' LONGHI sont exempts de tout défaut de matériaux et de manufacture. Notre obligation sous cette garantie est limitée au remplacement ou à la réparation gratuite dans notre usine de toutes les pièces défectueuses autre que les pièces endommagées durant le transport, qui nous seront retournées - transport pré-payé - en dedans d'un an après la livraison à l'acheteur - utilisateur. Cette garantie ne sera applicable que si l'appareil a été utilisé selon les instructions du fabricant qui accompagnent l'appareil, et sur courant alternatif (AC). Cette garantie remplace toutes les autres garanties et représentations, exprimées ou implicites, et toute autre obligation ou responsabilité de notre part. Nous n'autorisons aucune autre personne ou compagnie à assumer pour nous une quelconque responsabilité en relation avec la vente ou l'utilisation de nos appareils. Cette garantie ne s'appliquera ni aux appareils qui seront réparés ou endommagés hors de notre usine, ni aux appareils qui auront été sujets à une mauvaise utilisation, à une négligence ou à un accident.

Si des réparations ou des pièces de rechange sont nécessaires, vous êtes priés d'écrire à:

DeLonghi America Inc.
Park 80 West Plaza One, 4th floor
Saddle Brook NJ 07663
Tel. No 1-800-322-3848

ou bien contacter notre site Internet:
www.delonghiusa.com