


DeLonghi

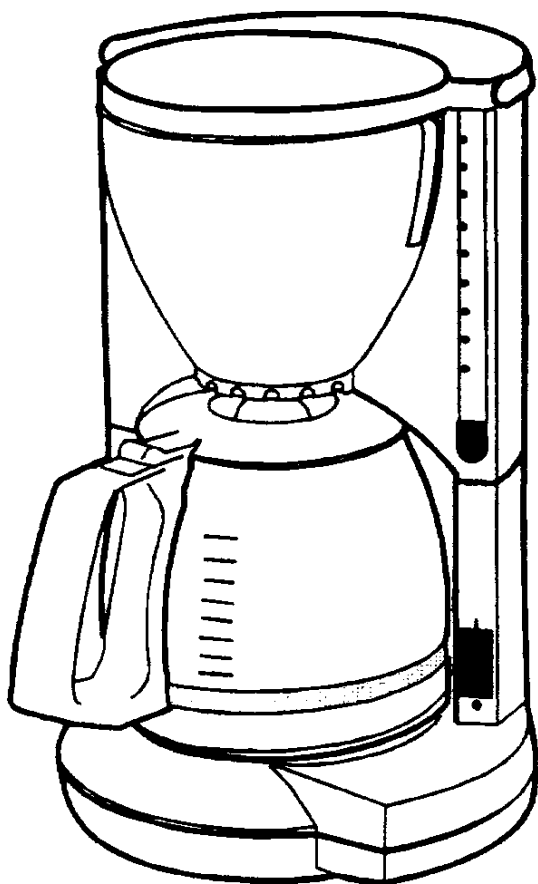

INSTRUCTIONS FOR USE

Thank You For Choosing DeLonghi

DeLonghi products are the finest and most versatile products available. We are confident that you will enjoy your new DeLonghi appliance.

Please read this manual carefully as it will fully explain the operation of your new appliance.

If you have any questions or comments regarding your new DeLonghi appliance, or any DeLonghi product please feel free to contact our Customer Service Hotline at:

1-800-322-3848

Again, thank you for choosing a DeLonghi product.

●● Important Safeguards ●●

When using electrical appliances, basic safety precautions should always be followed, including the following.

1. Read all instructions carefully
2. Do not touch hot surfaces. Use handles or knobs
3. To protect against risk of fire, electric shock or personal injury, do not put cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury.
8. Do not use outdoors
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
10. Do not place on or near a hot gas or electric burner, or in a heated oven
11. To disconnect, press the power switch to "OFF", then remove plug from wall outlet.
12. Never use warm or hot water to fill the water container. Use cold water only.
13. Scalding may occur if the cover is lifted or removed during the brewing cycle
14. Do not remove carafe from hot plate while liquid is dripping from basket for more than 30 seconds.
15. Snap the lid securely to the carafe before serving.
16. Never use the carafe on a range top or in a conventional or microwave oven.
17. Do not set a hot carafe on a wet or cold surface
18. Do not use a cracked carafe, or a carafe that has a loose or weakened handle
19. Do not clean the coffee maker with scouring powders, steel wool pads, or other abrasive materials.
20. Do not use this appliance for other than intended use.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

●● Short Cord Instructions ●●

1. A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.
2. An extension cord may be used if care is exercised in its use.
3. If an extension cord is used, the marked electrical rating of extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over accidentally.

●● Before First Use ●●

Carefully unpack the coffee maker and carafe and remove all packaging materials. Wipe the machine with a clean, damp cloth.


Caution: Do not immerse the appliance in water or other liquid.

To remove any dust that may have accumulated on the removable parts during packaging, wash the filter basket and carafe with warm, soapy water. Rinse and dry. Do not use harsh or abrasive cleansers.

Note: We recommend that prior to brewing your first cup of coffee you “brew” cold water only, without using ground coffee or a paper filter. This will remove any dust that may have settled inside the coffee maker.

Important: Please use only cold water. The automatic brewing system has been designed to work only with cold water.

●● Know Your Coffee Maker ●●

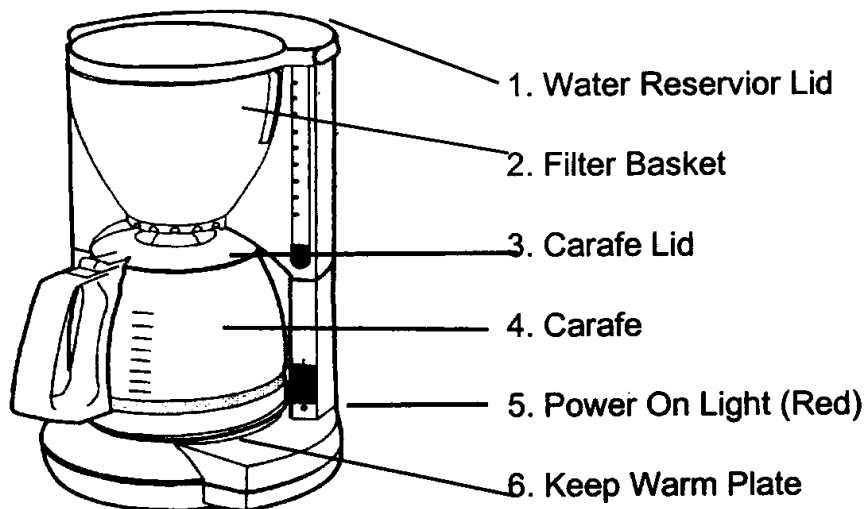

●● Using Your Coffee Maker ●●

1. Place your drip coffee maker on a flat surface, such as a counter top. Plug the unit into a 110 volt AC outlet
2. Swing the filter door outward to the left. Lift out the removable filter basket located in the door. Insert a #4 cone shape paper filter or a permanent filter into the filter basket.
Place the desired amount of ground coffee into the filter. See the chart below to determine the correct amount of coffee to use.

Note: We recommend using coffee ground for automatic drip coffee makers for best results. After using your drip coffee maker a few times, you may adjust the amount to suit your taste.

Recommended Amounts of Coffee to Make 12 Cups

Mild	8 Level Tablespoons
Regular	10 Level Tablespoons
Strong	12 Level Tablespoons

3. Return the filter basket with the filled filter to the swivel door. Be sure that the filter basket is seated properly in the swivel filter door. Swing the swivel filter door closed and snap it into place. Make sure to close the door completely.

Do Not Operate your Coffee maker if the door does not close completely. If the door does not close completely, check to see that the filter basket is properly seated and snap the door into place.

4. Open the hinged lid to the water reservoir located on top of the coffee maker. Fill the glass carafe up to the bottom of the spout with cold water. **Important: Use only cold water - the automatic brewing cycle is designed to work only with cold water.** Empty the water from the carafe into the water reservoir. Close the hinged lid. Place the glass carafe with the lid on the warming plate.
5. Press the power select button twice. The "ON" lamp will now light, indicating that your coffee maker has begun the brewing cycle.

● ● Auto-Pause Drip Stop ● ●

Your coffee maker has been designed with an auto-pause drip stop feature. If you wish, at anytime, during the brewing cycle, you may temporarily remove the glass carafe from the unit and pour a cup of hot coffee. The brewing cycle will be interrupted and no coffee will drip from the filter basket. Simply replace the carafe on the warming tray to restart the brewing process.

Caution: **The carafe must be replaced under the brew basket in less than a minute to prevent the brew basket from overflowing.**

● ● Cleaning Your Drip Coffee Maker ● ●

Remove the lid from the carafe by grasping carafe by its handle and with your hand grasp lid by placing your thumb on top of the hinge area. Pull the lid toward you and pop out the hinge pin. The carafe and carafe lid may be washed with warm, soapy water or placed in the top rack of the dishwasher. Do not place any other part or parts of your coffee maker in the dishwasher. Never use harsh or abrasive cleaners on any part or parts of your coffee maker.

The swivel filter door may be removed from the heating stand and washed in warm, soapy water. To remove this piece, open the door completely and remove the filter basket. Holding the bottom of the filter door next to the hinge, lift to remove bottom hinge pin, then pull away and downward to remove the top hinge pin. The bottom hinge pin is intentionally shorter than the top pin.

To reinsert the door, insert the longer top pin into the top hinge. While pressing the door upwards slightly, fit the bottom pin into the bottom hinge. Push down to lock into place.

The heating stand may be wiped with a clean, damp cloth when necessary.

Important: Never immerse the heating stand in water or other liquid.

Do not try to clean the inside of the water chamber with a cloth because this will leave a residue of lint and may clog your drip coffee maker. Just rinse with cold water periodically.

●● Decalcifying ●●

Calcium build-up frequently occurs in drip coffee makers. This build-up is quite normal and is caused by minerals commonly found in drinking water.

Periodically, your drip coffee maker will need cleaning to remove any calcium or mineral deposits that may form. You will know when your coffee maker requires decalcifying when you notice an obvious slowing in brewing time.

We recommend decalcifying your drip coffee maker with a solution of white vinegar and cold water. A solution of two tablespoons white vinegar in one carafe of cold water works best.

Pour the solution into the water reservoir, then close the hinged lid and put the empty carafe and filter basket (without a filter insert) into place. Switch the coffee maker on, and allow the coffee maker to “brew” the vinegar solution.

When the vinegar solution has finished brewing, empty the carafe and rinse it out with clean water. Refill the water reservoir with cold water only, and run another “brew” cycle”. This will rinse out any remaining vinegar solution. If necessary, a second “brew” or water only can be performed.

We recommend decalcifying your drip coffee maker four times a year, or at any time the brewing time slows down.

●● LIMITED WARRANTY ●●

WHAT DOES THIS WARRANTY COVER? We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers of any defective part or parts thereof other than parts damaged in transit, which shall be returned to us, transportation prepaid. This warranty shall apply only if the appliance is used in accordance with the factory directions which accompany it, and on an Alternating Current (AC) circuit.

HOW LONG DOES THE COVERAGE LAST? This warranty runs for one year from the date of delivery and applies only to the original purchaser for use.

WHAT DOES THE WARRANTY NOT COVER? This warranty does not cover defects or damage of the appliance which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damages resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

HOW DO YOU GET SERVICE? If repairs become necessary or spare parts are needed please contact:

DeLonghi America, Inc.
Park 80 West, Plaza One
Saddle Brook, NJ 07663
or call us at 1-800-322-3848

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with DeLonghi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. DeLonghi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

HOW DOES STATE LAW APPLY? This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.