

BRAUN

KF 580



AromaPassion
time control

Type 3105

 
 
 
 
 
 


Braun Infoline

Deutsch	4, 24, 27
English	6, 24, 27
Français	8, 24, 27
Español	10, 24, 27
Português	12, 25, 27
Nederlands	14, 25, 27
Dansk	16, 25, 27
Norsk	18, 25, 27
Svenska	20, 26, 27
Suomi	22, 26, 27

- (D)** Haben Sie Fragen zu diesem Produkt?
- (A)** Rufen Sie an (gebührenfrei):
00 800 27 28 64 63
00 800 BRAUNINFOLINE
- (CH)** **08 44 - 88 40 10**
- (E)** Servicio al consumidor para España:
901-11 61 84
- (P)** Serviço ao Consumidor para Portugal:
808 20 00 33
- (NL)** Heeft u vragen over dit produkt?
Bel Braun Consumenten-infolijn:
(070) 4 13 16 53
- (B)** Vous avez des questions sur ce produit ?
Appelez Braun Belgique
(02) 711 92 11
- (DK)** Har du spørgsmål om produktet? Så ring
70 15 00 13
- (N)** Spørsmål om dette produktet? Ring
88 02 55 03
- (S)** Frågor om apparaten? Ring Kundservice
020 - 21 33 21
- (FIN)** Onko Sinulla kysyttävää tuotteesta? Soita
0203 77877

Internet:
www.braun.com

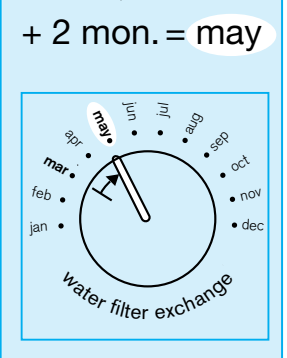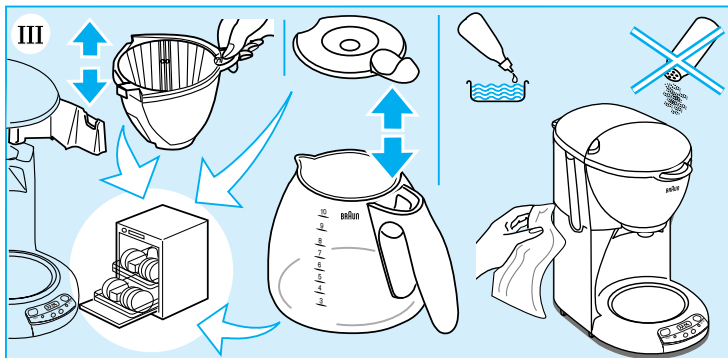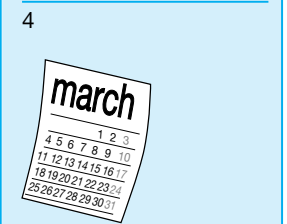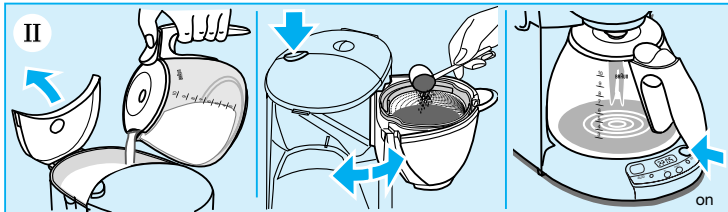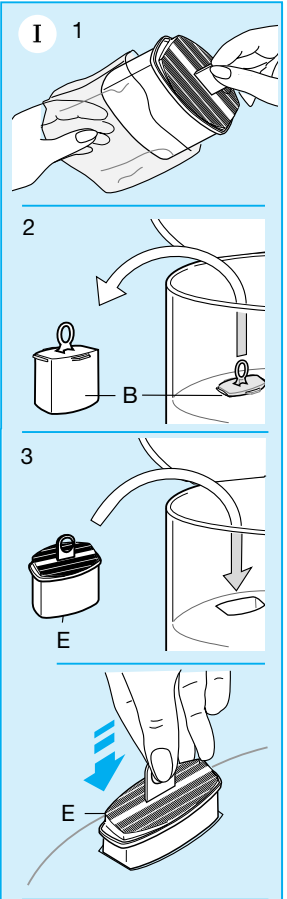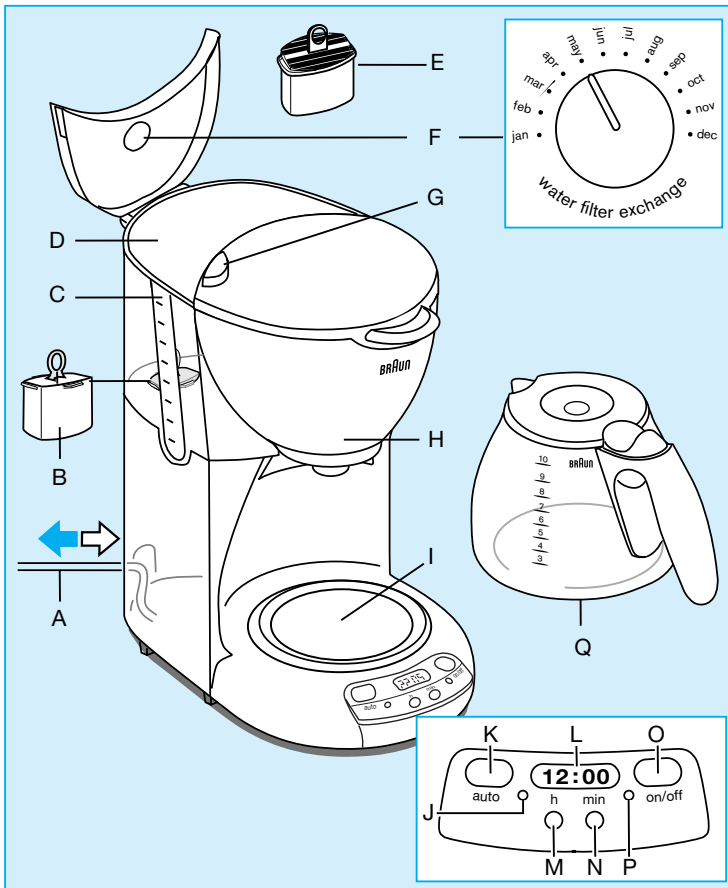

English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun coffeemaker.

Caution

Please read the use instructions carefully and completely before using the appliance.

- This appliance must be kept out of reach of children.
- Before plugging into a socket, check that your voltage corresponds with the voltage printed on the bottom of the appliance.
- Avoid touching hot surfaces, especially the hotplate. Never let the cord come in contact with the hotplate.
- Do not put the glass carafe on other heated surfaces (such as stove burners, hot trays, etc.).
- Do not microwave glass carafe.
- Before you start preparing a new pot of coffee, always allow the coffeemaker to cool down for approximately five minutes (switch off the appliance), otherwise steam can develop when filling the water tank with cold water.
- Braun electric appliances meet applicable safety standards. Repairs on electric appliances (including cord replacement) must only be carried out by authorized Braun service centers. Faulty, unqualified repair work may cause accidents or injury to the user.
- This appliance was constructed to process normal household quantities.
- Always use cold water to make coffee.

Maximum cups

10 cups (125 ml each)

Description

- Ⓐ Cord/cord storage
- Ⓑ Space compensator
- Ⓒ Water level indicator
- Ⓓ Water tank
- Ⓔ Water filter cartridge
- Ⓕ Water filter exchange dial
- Ⓖ Swing-filter push button
- Ⓗ Filter basket with drip stop
- Ⓘ Hotplate
- Ⓝ Green pilot light for automatic operation
- Ⓚ «auto» button for activating automatic operation
- Ⓛ Clock display
- Ⓜ «h» button (for setting hours)
- Ⓝ «min» button (for setting minutes)
- Ⓞ On/off button
- Ⓟ Red operating pilot light
- Ⓠ Glass carafe

I Setting into operation

Water filter benefits and installation

The water filter improves coffee flavor by significantly reducing chlorine and calcification (lime scale) buildup. Provided that the cartridge is replaced regularly (every two months), the water filter provides better tasting coffee and extends the life of your coffeemaker. Braun water filter cartridges are available at your local retailer or Braun service centers.

Installing the water filter cartridge

1. Unpack the water filter cartridge Ⓔ.
2. Remove the space compensator Ⓑ from the water tank.
3. Insert the water filter cartridge. (Be certain to keep the space compensator as it must be installed in the water tank whenever the water filter cartridge is removed.)
4. The water filter should be exchanged every two months. To remind you, set the dial Ⓕ to the month that the water filter should be replaced.

Note: Before using the coffeemaker for the first time, after a long period of not using it, or after installing a new water filter cartridge, run the coffeemaker through one brewing cycle using the maximum amount of cold, fresh water without any ground coffee in the filter basket.

Setting the clock

After plugging in the coffeemaker, the time «00:00» will flash on the display Ⓛ. To set the clock, press either the «h» or the «min» button Ⓜ/Ⓝ for at least two seconds. Then hold the button or press repeatedly until you reach the desired time.

Press the «h» button Ⓜ to program the hours. Press the «min» button Ⓝ to program the minutes.

Recommendation: Just before reaching the correct time, repeatedly press the «h» or «min» button briefly to avoid going past the desired time. The colon between the hours and minutes will flash for five seconds indicating that the clock has been successfully programmed.

Note: If the power supply to the coffeemaker is interrupted (e.g., power failure, cord is unplugged), clock and programmed time are stored for 10 minutes.

Manual operation

To switch on, press the «on/off» button Ⓞ. The red pilot light Ⓟ will light up indicating that the coffeemaker is switched on and brewing is in process. To switch off the coffeemaker, press the «on/off» button. The red pilot light will go off to indicate that the coffeemaker has been switched off.

Automatic operation







To program the automatic operation, press the «auto» button Ⓚ until the green pilot light Ⓝ begins to flash. The time «12:00» or the previously programmed time appears on the display.

Then program the time for automatic operation by pressing the «h» and «min» buttons Ⓜ/Ⓝ as described under «Setting the clock». After programming is completed, the green pilot light Ⓝ will go off after five seconds.


To activate the automatic operation, briefly press the «auto» button Ⓚ. The green pilot light Ⓝ lights up and the preset brewing time is quickly shown on the display Ⓛ. Brewing will begin at the preset time. When the brewing process begins, the green pilot light Ⓝ goes off and the red pilot light Ⓟ lights up to indicate that the coffeemaker is in operation.

Adjustable automatic shut-off (auto-off)

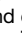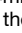The automatic shut-off mechanism is programmed to turn the coffeemaker off in 2 hours, but can be set manually for any time between 20 minutes and 3 hours 59 minutes. If times below 20 minutes should be programmed, the clock will automatically readjust itself to a 20 minutes (minimum shut-off time).

Press the «on/off» button  until the red pilot light  begins to flash. Now the display  shows the shut-off time. Release the «on/off» button  and change the desired shut-off time with the «h» and «min» buttons / . When the red pilot light goes off, the programmed shut-off time is stored. The display shows the current time of day again.

II Making coffee

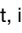Fill the tank with fresh cold water, press the swing-filter push button  to open the filter basket, insert a No. 4 paper filter, add ground coffee, close the filter basket, and place the carafe on the hotplate. Switch on the coffeemaker (manual or automatic operation) as described above.

For greater convenience, when filling with or disposing of ground coffee, the filter basket can be easily taken off its hinge. The drip-stop feature prevents dripping when the carafe is removed to pour a cup before brewing is finished. The carafe should be immediately returned to the hotplate to prevent the filter basket from overflowing.

Brewing time per cup: approximately one minute. The amount of brewed coffee in the carafe will be below initial filling level as water is retained by ground coffee during the brewing cycle.

III Cleaning

Always unplug the appliance before cleaning. Never clean the appliance under running water, or immerse it in water; only wipe it with a damp cloth. All removable parts are dishwasher-safe.

IV Decalcifying

If you have hard water and you use your coffeemaker without a water filter, it has to be decalcified regularly. When using the water filter cartridge and exchanging it regularly, you ordinarily will not need to decalcify. However, if your coffeemaker takes longer than usual to brew, it should be decalcified.

Important: Replace the water filter with the space compensator during any decalcification procedure.

- You can use a commercially available decalcifying agent not affecting aluminium.
- Follow the instructions of the manufacturer of the decalcifying agent.
- Repeat the procedure as many times as necessary in order to reduce the brewing time per cup to a normal level.

- Allow the maximum amount of fresh cold water to run through at least twice to clean the coffeemaker after decalcification.

Best practices for best results

This coffeemaker is designed to deliver maximum coffee aroma. Therefore, Braun recommends:

- Use only fresh ground coffee.
- Store ground coffee in a cool, dry and dark place (e.g., refrigerator) in an airtight container.
- Use only Braun water filters and exchange every two months with regular use.
- Clean and decalcify the coffeemaker regularly as described in parts III and IV.

Subject to change without notice

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



Deutsch

Garantie

Als Hersteller übernehmen wir für dieses Gerät – **nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer** – eine Garantie von 2 Jahren ab Kaufdatum. Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen. Die Garantie kann in allen Ländern in Anspruch genommen werden, in denen dieses Braun Gerät von uns autorisiert verkauft wird.

Von der Garantie sind ausgenommen: Schäden durch unsachgemäßen Gebrauch, normaler Verschleiß und Verbrauch sowie Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen. Bei Eingriffen durch nicht von uns autorisierte Braun Kundendienstpartner sowie bei Verwendung anderer als Original Braun Ersatzteile erlischt die Garantie.

Im Garantiefall senden Sie das Gerät mit Kaufbeleg bitte an einen autorisierten Braun Kundendienstpartner. Die Anschrift für Deutschland können Sie kostenlos unter 00800/27 28 64 63 erfragen.

English

Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

For UK only:

This guarantee in no way affects your rights under statutory law.

Français

Garantie

Nous accordons une garantie de 2 ans sur ce produit, à partir de la date d'achat.

Pendant la durée de la garantie, Braun prendra gratuitement à sa charge la réparation des vices de fabrication ou de matière en se réservant le droit de décider si certaines pièces doivent être réparées ou si l'appareil lui-même doit être échangé. Cette garantie s'étend à tous les pays où cet appareil est commercialisé par Braun ou son distributeur exclusif.

Cette garantie ne couvre pas : les dommages occasionnés par une utilisation inadéquate et l'usure normale. Cette garantie devient caduque si des réparations ont été effectuées par des personnes non agréées par Braun et si des pièces de rechange ne provenant pas de Braun ont été utilisées.

Pour toute réclamation intervenant pendant la période de garantie, retournez ou rapportez l'appareil ainsi que l'attestation de garantie à votre revendeur ou à un Centre Service Agréé Braun.

Appelez au 01.47.48.70.00 pour connaître le Centre Service Agréé Braun le plus proche de chez vous.

Clause spéciale pour la France

Outre la garantie contractuelle exposée ci-dessus, nos clients bénéficient de la garantie légale des vices cachés prévue aux articles 1641 et suivants du Code civil.

Español

Garantía

Braun concede a este producto 2 años de garantía a partir de la fecha de compra. Dentro del periodo de garantía, subsanaremos, sin cargo alguno, cualquier defecto del aparato imputable tanto a los materiales como a la fabricación, ya sea reparando, sustituyendo piezas, o facilitando un aparato nuevo según nuestro criterio.

En el supuesto de que la reparación no fuera satisfactoria, el usuario tiene derecho a solicitar la sustitución del producto por otro igual, o a la devolución del precio pagado.

La garantía no ampara averías por uso indebido, funcionamiento a distinto voltaje del indicado, conexión a un enchufe inadecuado, rotura, desgaste normal por el uso que causen defectos o una disminución en el valor o funcionamiento del producto. La garantía perderá su efecto en caso de ser efectuadas reparaciones por personas no autorizadas, o si no son utilizados recambios originales de Braun.

La garantía solamente tendrá validez si la fecha de compra es confirmada mediante la factura o el albarán de compra correspondiente.

Esta garantía tiene validez en todos los países donde este producto sea distribuido por Braun o por un distribuidor asignado por Braun.

En caso de reclamación bajo esta garantía, diríjase al Servicio de Asistencia Técnica de Braun más cercano.