

BRAUN

Oral-B

D 9525

D 9525 A

D 9525 T

D 9511

D 9513



Plak Control *ultra* power toothbrush

Type 4728

Type 4725

Deutsch	3, 15, 16, 19
English	4, 15, 16, 19
Français	5, 15, 16, 19
Italiano	6, 15, 16, 19
Nederlands	7, 15, 17, 19
Dansk	8, 15, 17, 19
Norsk	9, 15, 17, 19
Svenska	10, 15, 17, 19
Suomi	11, 15, 18, 19
Ελληνικά	14, 15, 18, 19



Braun Infoline

- (D)** Haben Sie Fragen zu diesem Produkt?
- (A)** Rufen Sie an (gebührenfrei):
00 800 27 28 64 63
00 800 BRAUNINFOLINE
- (CH)** **08 44 - 88 40 10**
- (I)** Servizio consumatori:
(02) 6 67 86 23
- (NL)** Heeft u vragen over dit produkt?
Bel Braun Consumenten-infolijn:
(070) 4 13 16 58
- (B)** Vous avez des questions sur ce produit ?
Appelez Braun Belgique
(02) 711 92 11
- (DK)** Har du spørgsmål om produktet?
Så ring
70 15 00 13
- (N)** Spørsmål om dette produktet?
Ring
88 02 55 03
- (S)** Frågor om apparaten?
Ring Kundservice
020 - 21 33 21
- (FIN)** Onko Sinulla kysyttävää tuotteesta?
Soita
0203 77877

Internet:

 
 
 
 
 
 
 
 
 
 
 
 
 
www.braun.com

www.oralb.com

4-716-232/00/II-03

D/GB/F/I/NL/DK/N/S/FIN/GR

Printed in Germany

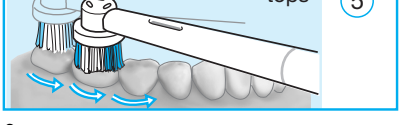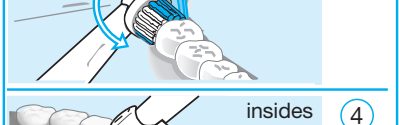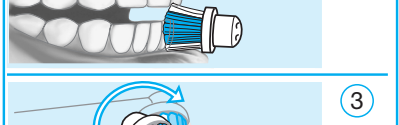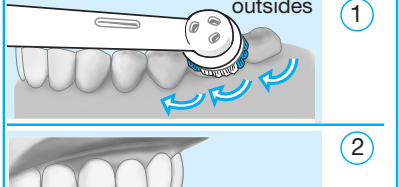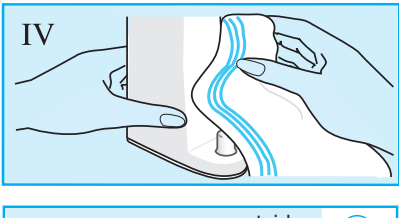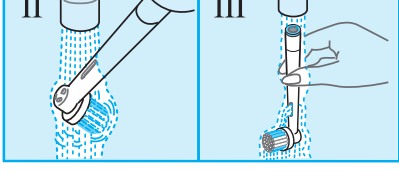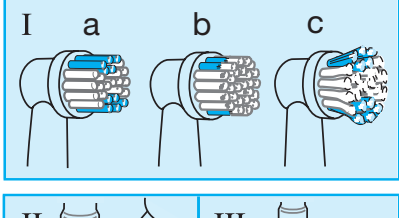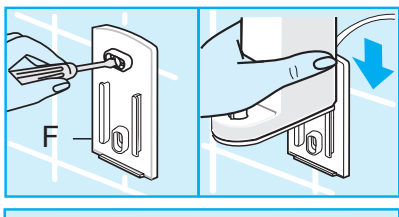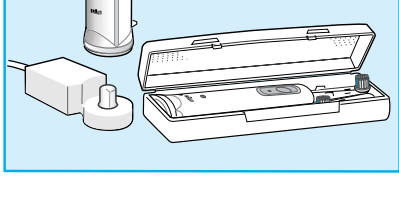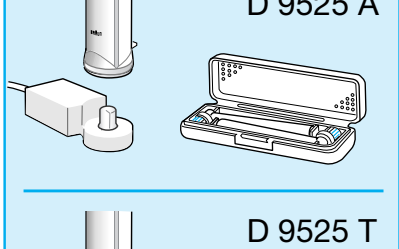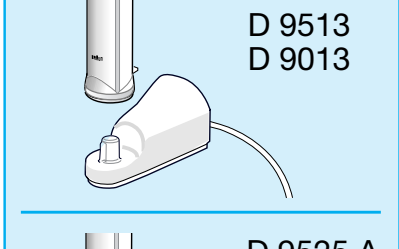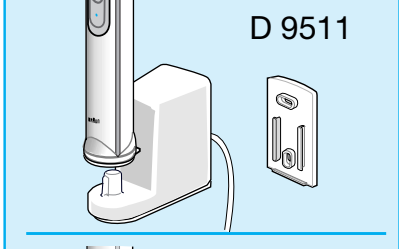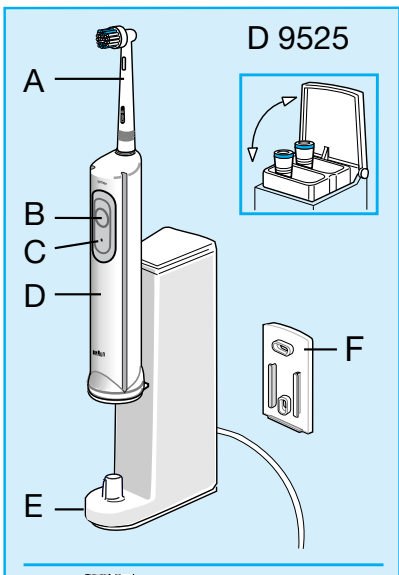

English

The Braun Oral-B Plak Control Ultra has been developed together with leading dental professionals to effectively remove plaque from all areas of your teeth. It has been designed for daily use for the whole family.

Please read the use instructions carefully before first use.

Important

Periodically check the cord for damage. Should this be the case, take the charging unit (E) to a Braun Service Centre. A damaged or non-functioning unit should no longer be used.

Description

- A Brushhead
- B On switch
- C Off switch
- D Handle
- E Charging unit
- F Wall holder

Specifications

Power supply: see bottom of charging unit

Handle voltage: 1.2 V

Connecting and charging

The appliance is electrically safe and can be used in the bathroom without hesitation.

- Plug the charging unit into an electrical outlet. Place the handle on the charging unit. Handle must be switched off.
- A full charge takes 16 hours and will provide an operation time of approx. 20 minutes.
- For everyday use, the handle can be stored on the plugged-in charging unit to maintain the toothbrush at full power. Overcharging is impossible.

Battery maintenance

To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and discharge the handle by regular use at least every 6 months.

Using the toothbrush

The toothbrush can be used with any leading brand of toothpaste.

- To avoid splashing, guide the brushhead to your teeth before switching the appliance on.
- Slowly guide the brushhead from tooth to tooth, spending a few seconds on each tooth surface.
- Brush the gums as well as the teeth, first the outsides, then the insides and finally the chewing surfaces.
- Do not press too hard or scrub, simply let the brush do all the work.
- To thoroughly remove plaque, brush for at least two minutes.

Timer

An incorporated timer memorises the elapsed brushing time. After two minutes the timer signals by a short stutter.



During the first days of using the toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after two weeks, please consult your dentist or hygienist.

Dentists recommend that you replace any toothbrush every 3 months. Therefore, the brushhead is provided with INDICATOR[®] bristles (I.a). With proper brushing twice a day for two minutes, the colour will disappear half-way down the bristles in a 3-month period, provided you use toothpaste (I.b). If the bristles splay before the colour recedes (I.c), you are exerting too much pressure on teeth and gums.

Replacement brushheads

This product can be used with all Braun Oral-B brushheads.

Cleaning

After use, rinse the brushhead for several seconds under running water with the handle switched on (II).

Then switch off the handle and take off the brushhead. Rinse both parts separately under running water (III) and wipe them dry.

From time to time, also clean the charging unit with a damp cloth (IV).

For cleaning purposes, the brushhead compartment (D 9525 only) is removable.

Environmental notice

This product contains nickel-cadmium rechargeable batteries. In the interest of protecting the environment, do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre.


 
 
 
 
 
 
 


However, if you prefer to dispose of the battery yourself, please refer to the section «Battery removal».

Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



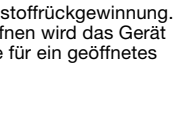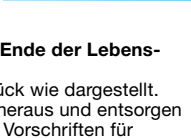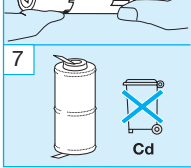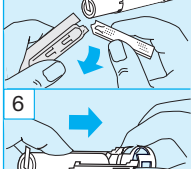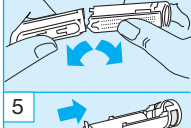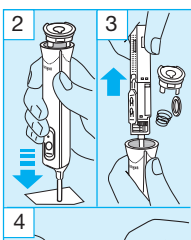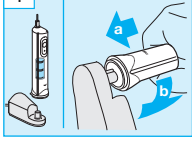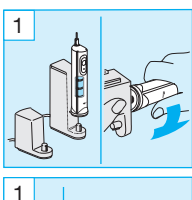

Deutsch

Akku-Entsorgung am Ende der Lebensdauer des Gerätes

Öffnen Sie das Handstück wie dargestellt. Nehmen Sie den Akku heraus und entsorgen Sie ihn gemäß örtlicher Vorschriften für Umweltschutz und Rohstoffrückgewinnung. Vorsicht! Durch das Öffnen wird das Gerät zerstört. Keine Garantie für ein geöffnetes Gerät.

English

Battery removal at the end of the product's useful life

Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

Caution: Opening the handle will destroy the appliance and invalidate the guarantee.

Français

Retrait des batteries à la fin de la durée de vie du produit

Ouvrir le corps de brosse comme indiqué, retirer les batteries et les mettre au rebut, conformément à la réglementation sur l'environnement.

Attention : en ouvrant l'appareil, vous le détruisez et la garantie est invalidée.

Italiano

Eliminazione delle batterie alla fine del ciclo di vita del prodotto

Aprire il corpo motore come illustrato in figura, rimuovere le batterie e smaltirle seguendo le locali norme ambientali.

Attenzione: l'apertura del corpo motore distrugge lo strumento ed invalida la garanzia del prodotto.

Nederlands

Het verwijderen van batterijen aan het eind van de nuttige levensduur van het apparaat

Open het aandrijfdeel als hiernaast afgebeeld, verwijder de batterij en lever deze in bij de daarvoor bestemde adressen.

Waarschuwing: het openen van het aandrijfdeel zal het apparaat onbruikbaar maken en daarmee zal de garantie op het apparaat vervallen.

Dansk

Udtagelse af batteriet efter endt levetid

Forsøg på at åbne håndtaget vil odelægge hele eltandborsten. Et nyt batteri kan derfor ikke isættes håndtaget.

Være endvidere opmærksom på, at så snart batteriet fjernes eller forsøges taget ud, bortfalder garantien.

Norsk

Fjerning av batteriet ved slutten av apparatets levetid

Åpne motordelen som vist på bildet, ta ut batteriet og kast det i henhold til lokale miljøbestemmelser.

Advarsel: Åpning av motordelen vil ødelegge apparatet, og gjøre garantien ugyldig.

Svenska

Att avlägsna batteriet när produkten är uttjänt

Öppna motordelen som bilden visar, ta ur batteriet och gör dig av med det på det sätt som miljölagen föreskriver.

Varning: Genom att öppna motordelen förstörs apparaten och garantin slutar att gälla.

Suomi

Akun irrottaminen laitteen käyttöiän loputtua

Avaa runko-osa kuvan ohjeiden mukaan, poista akku ja hävitä se kotikuntasi antamien ympäristönsuojeluohjeiden mukaisesti.

Varoitus: runko-osan avaaminen tekee laitteesta käyttökelvottoman. Takuu ei koske avattua laitetta.

Ελληνικά

Για να βγάλετε τη μπαταρία μετά τη χρησιμότητα ζωής της

Ανοίξτε τη λαβή όπως φαίνεται στη διπλανή φωτογραφία, αφαιρέστε τη μπαταρία και ανακυκλώστε την στα πλαίσια της προστασίας του περιβάλλοντος.

Προσοχή: Ανοίγοντας τη λαβή η συσκευή καταστρέφεται και η εγγύηση παύει να ισχύει.