

# BRAUN

## 3105









# Interface

Type 5 447



## Braun Infoline

- |                                   |            |  |
|-----------------------------------|------------|--|
| Deutsch                           | 4, 30, 39  | (D) Haben Sie Fragen zu diesem Produkt?<br>Rufen Sie an: (in Deutschland und<br>Österreich zum Nulltarif)<br><b>00 800 27 28 64 63</b><br><b>00 800 BRAUNINFORLINE</b> |
| English                           | 6, 30, 39  | (A)  |
| Français                          | 8, 31, 39  |  |
| Español                           | 10, 32, 39 | (CH) <b>08 44 - 88 40 10</b>   |
| Português                         | 12, 33, 39 | (E) Servicio al consumidor para España:<br><b>901-116184</b>   |
| Italiano                          | 14, 34, 39 | (P) Serviço ao Consumidor para Portugal:<br><b>080 820 00 33</b>   |
| Nederlands                        | 16, 34, 39 | (I) Servizio consumatori:<br><b>(02) 667 86 23</b>   |
| Dansk                             | 18, 35, 39 | (NL) Heeft u vragen over dit produkt?<br>Bel Braun Consumenten-infolijn:<br><b>(070) 4 13 16 58</b>  |
| Norsk                             | 20, 36, 39 |  |
| Svenska                           | 22, 36, 39 |  |
| Suomi                             | 24, 37, 39 |  |
| Türkçe                            | 26, 39     |  |
| Ελληνικά                          | 28, 37, 39 | (B) Vous avez des questions sur ce produit?<br>Appelez Braun Belgique<br><b>(02) 711 92 11</b>   |
|                                   |            | (DK) Har du spørgsmål om produktet? Så ring<br><b>70 15 00 13</b>  |
|                                   |            | (N) Spørsmål om dette produktet? Ring<br><b>88 02 55 03</b>  |
| <b>Internet:</b><br>www.braun.com |            | (S) Frågor om apparaten? Ring Kundservice<br><b>031 - 21 33 21</b>   |
|                                   |            | (FIN) Onko Sinulla kysytävää tuotteesta? Soita<br><b>0203 77877</b>  |
|                                   |            | (TR) Türkiye'deki Tüketici Danışma Servisi:<br><b>0 800 261 19 53</b><br><b>0 800 415 51 27 (Alo Arıza)</b>  |

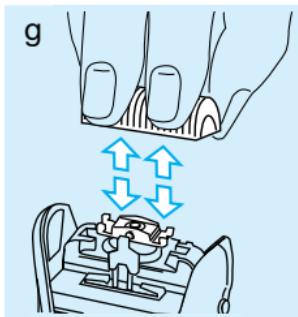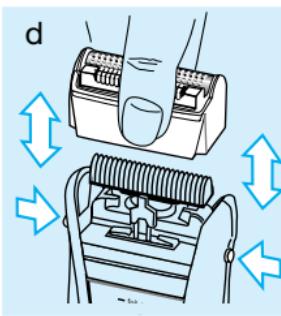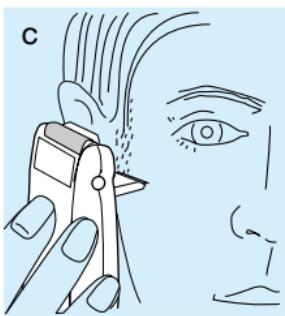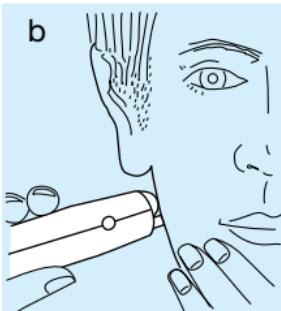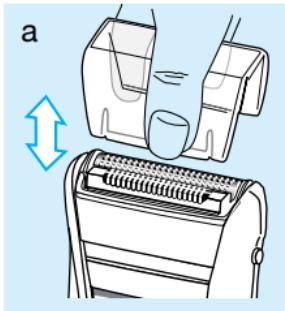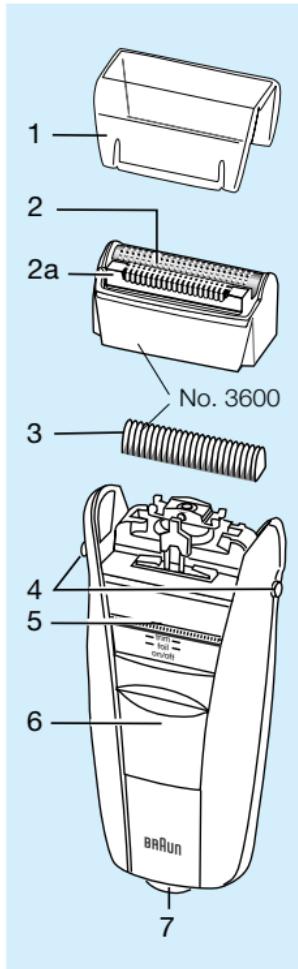

# English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun shaver.

## Caution

- Do not use the shaver near, or over, basins filled with water (e.g. bath tubs, showers etc.).
- For safety reasons, periodically check the cord for damage and replace it, if it is loose in the shaver socket.
- Do not wind the cord around the shaver.

## 1 Description

1	Foil protection cap	4	Release button
2	Shaver foil	5	Pop-out long hair trimmer
2a	Floating cutter	6	Switch
3	Cutter block	7	Shaver socket

## Specifications

- Wattage: 3 Watts
- Voltage range: 100-240 V ~ / 50 or 60 Hz  
(automatic adaptation of voltage and frequency)

## 2 Shaving

### Switch positions

off

on = Combination shave (simultaneous use of floating cutter and shaver foil).  
The floating cutter cuts off 3-day beards or longer «problem hairs»,  
the foil follows to give a close, smooth shave (b).

foil = Shaver foil only (for difficult to reach areas, e.g. under the nose).

trim = The long hair trimmer is activated (for trimming sideburns, moustache and beard) (c).

### **Tips for the perfect shave**

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin.
- Stretch your skin and shave against the direction of beard growth.
- Replace the shaver foil and cutter block every 1½ years, or when the parts are worn, to ensure optimum shaving performance.

## **3 Keeping your shaver in top shape**

### **3.1 Cleaning**

- After shaving, switch the shaver off. Press the release buttons, take off the shaver foil (d) and gently tap it out on a flat surface (e).
- Then thoroughly clean the cutter block with the brush (f). About every four weeks, clean the cutter block with Braun cleaning agents (g).
- Do not clean the shaver foil with the brush.
- If you have a very dry skin and you notice a reduced performance of the shaver, you should put a drop of sewing machine oil onto the floating cutter and shaver foil (g).

### **3.2 Replacing the shaving parts**

- The shaver foil and cutter block are precision parts that, in time, are subject to wear. A regular replacement of the parts every 1½ years or when these parts are worn, will ensure, that you are getting the close, comfortable and quick shave you expect from your Braun shaver.  
(Shaver foil and cutter block: part no. 3600)
- Press the release buttons, take off the shaver foil. Replace the new shaver foil in the right direction until it locks in place.
- To remove the cutter block, lift it off (g).  
To replace the cutter block, snap onto the holding studs.

Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



## **Deutsch**

### **Garantie**

Als Hersteller übernehmen wir für dieses Gerät – **nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer** – eine Garantie von 1 Jahr ab Kaufdatum.

Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen.

Von der Garantie sind ausgenommen: Schäden, die auf unsachgemäßen Gebrauch (Betrieb mit falscher Stromart/Spannung, Anschlüsse an ungeeignete Stromquelle, Knickstellen am Scherblatt, Bruch) zurückzuführen sind, Scherblatt- und sonstiger normaler Verschleiß und Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen.

Bei Eingriffen nicht von uns autorisierter Stellen oder bei Verwendung anderer als original Braun Ersatzteile erlischt die Garantie.

Die Garantie tritt nur in Kraft, wenn das Kaufdatum durch Stempel und Unterschrift des Händlers auf der Garantiekarte und der Registrierkarte bestätigt ist. Sie kann in allen Ländern in Anspruch genommen werden, in denen dieses Gerät von Braun oder ihren autorisierten Händlern verkauft wird.

Im Garantiefall senden Sie bitte das vollständige Gerät mit der ausgefüllten Garantiekarte einem unserer autorisierten Servicehändler oder an eine Braun Kundendienststelle. Die Anschriften für Deutschland können Sie zum Nulltarif unter der Rufnummer 00 800 / 27 28 64 63 erfragen. Wir stehen Ihnen hier mit unserer Braun Infoline auch für weitere Fragen zu unseren Produkten gern zur Verfügung

## **English**

### **Guarantee**

We grant a 1 year guarantee on the product commencing on the date of purchase.

Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in material or workmanship either by repairing, or exchanging parts or exchanging the whole appliance as we may choose.

Not covered by this guarantee: damage arising from improper use (operation with incorrect current/voltage, plugging it into an unsuitable power point, kinks in the shaver foil, breakage), normal wear on the shaver foil and defects which have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun parts are not used.

The guarantee only comes into force if the date of purchase is confirmed by the dealer's stamp and signature on the guarantee card and registration card.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor and where no import restrictions or other legal regulations hinder or prevent service being given under guarantee.

Service under the guarantee does not affect the expiry date of the guarantee. The guarantee on parts or entire appliances which are exchanged ends when the guarantee on this appliance expires.

In the event of a claim under this guarantee, hand in the complete appliance with the valid guarantee card to your dealer, or send both to the nearest Braun Customer Service Centre.

All other claims including for damages resulting from this guarantee are excluded unless our liability is legally mandatory.

Those claims arising out of the sales contract with the vendor are not affected by this guarantee.

#### **For UK only:**

This guarantee in no way affects your rights under statutory law.

## **Français**

### **Garantie**

Nous accordons une garantie d'un an sur ce produit, à partir de la date d'achat.

Pendant la durée de la garantie, Braun prendra gratuitement à sa charge la réparation des vices de fabrication ou de matières, en se réservant le droit de décider si certaines pièces doivent être réparées ou échangées, ou encore si l'appareil lui-même doit être échangé.

Les dommages occasionnés par une utilisation inadéquate (branchement sur courant continu, erreur de voltage, prise inappropriée, choc sur la grille, pièces brisées), l'usure normale de la grille et les défauts ne portant préjudice ni au bon fonctionnement ni à la valeur de l'appareil excluent toute prétention à la garantie. La garantie devient caduque si des réparations ont été effectuées par des personnes non agréées par Braun et si des pièces de rechange ne provenant pas de Braun ont été utilisées.

La garantie ne sera valable que si, la date d'achat ainsi que le cachet et la signature du magasin figurent sur la carte de garantie et la carte de contrôle.

Cette garantie est reconnue dans tous les pays où Braun ou son distributeur exclusif commercialise l'appareil et où aucune restriction d'importation ou règlement officiel n'empêchent d'assurer le service prévu par la garantie.