 


BRAUN



Type 5575

Lady Braun style universal






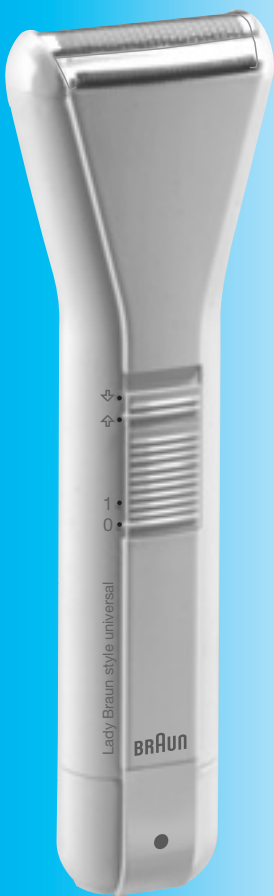


Braun Infoline

Deutsch	4, 37, 44
English	7, 37, 44
Français	10, 38, 44
Español	13, 38, 44
Português	16, 39, 44
Italiano	19, 40, 44
Nederlands	22, 40, 44
Dansk	25, 41, 44
Norsk	28, 41, 44
Svenska	31, 42, 44
Suomi	34, 42, 44

- (D)** Haben Sie Fragen zu diesem Produkt?
Rufen Sie an: (gebührenfrei)
00 800 27 28 64 63
00 800 BRAUNINFOLINE
- (A)** **00 800 27 28 64 63**
00 800 BRAUNINFOLINE
- (CH)** **08 44 - 88 40 10**
- (E)** Servicio al consumidor para España:
901-11 61 84
- (P)** Serviço ao Consumidor para Portugal:
808 20 00 33
- (I)** Servizio consumatori:
(02) 6 67 86 23
- (NL)** Heeft u vragen over dit produkt?
Bel Braun Consumenten-infolijn:
(070) 4 13 16 58
- (B)** Vous avez des questions sur ce produit ?
Appelez Braun Belgique
(02) 711 92 11
- (DK)** Har du spørgsmål om produktet?
Så ring
70 15 00 13
- (N)** Spørsmål om dette produktet?
Ring
88 02 55 03
- (S)** Frågor om apparaten?
Ring Kundservice
020 - 21 33 21
- (FIN)** Onko Sinulla kysyttävää tuotteesta?
Soita
0203 77877

      Internet:
www.braun.com

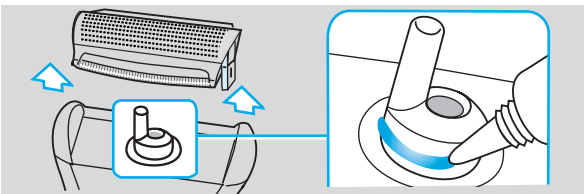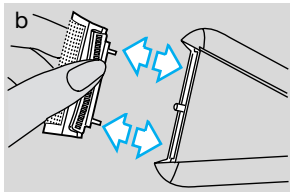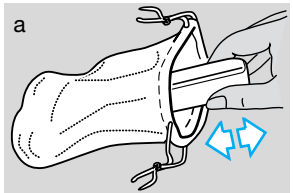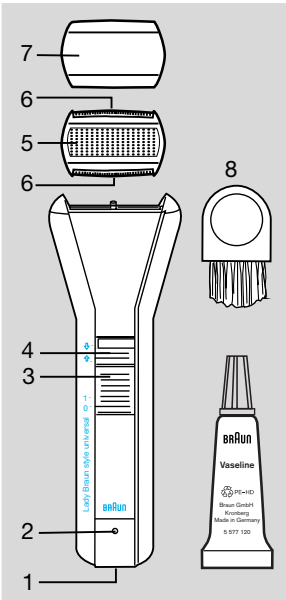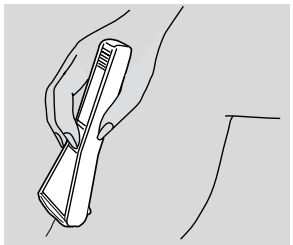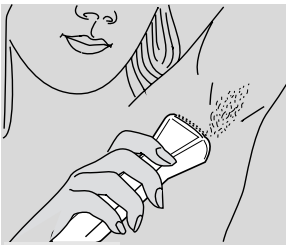

English

Lady Braun style

- ① Cord socket
 - ② Charging indicator
 - ③ On/off switch
 - ④ Switch lock
 - ⑤ Shaving foil
 - ⑥ Trimmers
 - ⑦ Protective cap
 - ⑧ Cleaning brush
- } Shaver head

The convenient two-way feature of the Lady Braun style allows you to use it without the cord via the built in rechargeable cell unit or with the cord connected directly to an outlet.

Lady Braun style automatically charges on any outlet with voltages between 100-240 V ac.

When travelling abroad, there is nothing you have to re-set to recharge the shaver. You can use it anywhere in the world. You may, however, need a plug adapter to fit local sockets.

Shaving with the cord

When shaving with the cord (i. e. when the shaver is connected directly to a mains outlet) the Lady Braun style is ready for use immediately. If the shaver should, however, not run immediately due to the discharged cell unit, recharge the shaver for approximately 1 minute (set switch to «0») to permit use with the cord again.

Cordless shaving/charging

A full charge will give you approximately 45 minutes of cordless shaving.

Before using the first time, charge the shaver to full capacity:

- Make sure the shaver is off = «0».
- Plug into an outlet.
- Charge for about 16 hours at first and completely discharge through normal use in order to get the best performance from the rechargeable cell unit.

This discharging/charging process should be repeated about every six months.

The charging indicator ② will light up when the shaver is being charged and as long as the shaver is connected to the mains.

Do not expose the shaver to temperatures below 32 °F (0 °C) or above 105 °F (40 °C) for any long periods. The ideal recharging temperature range is between 60 °F (15 °C) and 95 °F (35 °C).

Environmentally friendly cell unit

This appliance is provided with a nickel-hydride cell unit.

This cell does not contain any harmful heavy metals.

Nevertheless, please do not dispose of this appliance in the household waste at the end of its useful life.

Disposal can take place at a Braun Service Centre or appropriate



collection sites. However, if you prefer to dispose of the cell unit yourself, remove the cell unit as shown on page 43.

How to operate the shaver

Your Lady Braun style has a switch lock ④. It prevents the shaver from turning on accidentally when stored away.

To unlock: push switch lock up

To lock: push switch lock down

The switch ③ turns both the foil shaving system and the two curved trimmers on and off:

On = push switch up

Off = push switch down

Before shaving remove the protective cap ⑦. Grasp both sides in the middle and lift gently off. After you are finished, always put it back on again to protect the foil against damage.

Before starting off

Before shaving, make sure your skin is completely dry.

Shaving

Hair removal with the combined actions of the Lady Braun style foil and trimmer systems is fast, thorough, yet gentle to skin: The curved trimmers ⑥ first raise all long hairs and cut them off. Then the flexible foil ⑤ follows to smooth away any stubble. For best results, hold the shaver so that about half of the foil and one of the trimmers are in contact with your skin, with the trimmer leading.

Guide the shaver slowly over your skin without pressing. The Lady Braun style gives you equal shaving action on both trimmer sides, so you can move the shaver forwards and backwards again. The large, rounded shaver head lets you easily shave those difficult curvers and countours – on knees, ankles, underarms, bikini line, for instance.

When you are finished

After shaving, you may want to smooth on a little body cream or lotion. Caution, however, is advised in applying perfume or deodorants right away.

Store your Lady Braun style in its bag (pouch) when not in use nor recharging. Besides offering practical storage, it also protects the foil against possible damage (a).

Keeping your Lady Braun style in good condition

Before cleaning, turn the shaver off. The foil of your Lady Braun style is a precision part. To avoid damaging it, be careful when handling the shaver head.

After every use: Remove the shaver head by pulling it off (b). Tap the bottom (not the metal parts) on a flat surface (c).

Do not brush the shaver foil surface, because that may damage it. Then give the top of the shaver a quick cleaning with the brush. Replace the shaver head by clicking in place.

Do not shave with a damaged foil or cord. You may injure yourself if you do. If damage to the foil or the cord does occur, a replacement can be obtained via your authorised Braun dealer or a Braun Service Centre (see appendix). Do not wind the cord around the appliance.

To maintain the high performance of your shaver, please apply some vaseline approximately every 3 months or after each cleaning of the shaver. Take off the shaver head and apply a tiny amount of vaseline as indicated in illustration (d).

Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



Deutsch

Garantie

Als Hersteller übernehmen wir für dieses Gerät – nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer – eine Garantie von 2 Jahren ab Kaufdatum. Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen. Die Garantie kann in allen Ländern in Anspruch genommen werden, in denen dieses Braun Gerät von uns autorisiert verkauft wird.

Von der Garantie sind ausgenommen: Schäden durch unsachgemäßen Gebrauch, normaler Verschleiß und Verbrauch sowie Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen. Bei Eingriffen durch nicht von uns autorisierte Braun Kundendienstpartner sowie bei Verwendung anderer als Original Braun Ersatzteile erlischt die Garantie.

Im Garantiefall senden Sie das Gerät mit Kaufbeleg bitte an einen autorisierten Braun Kundendienstpartner. Die Anschrift für Deutschland können Sie kostenlos unter 00800/27 28 64 63 erfragen.

English

Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

 
This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

For UK only:

This guarantee in no way affects your rights under statutory law.

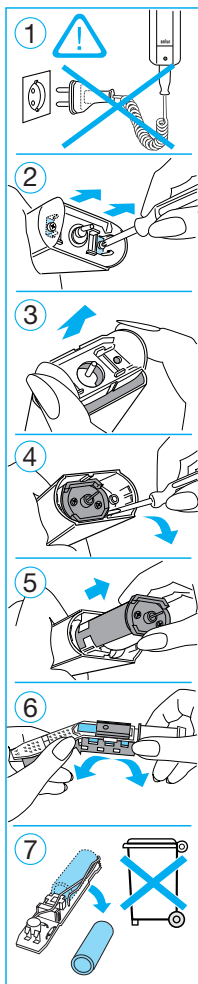

Deutsch

Akku-Entsorgung am Ende der Lebensdauer des Gerätes

English

Battery removal at the end of the product's useful life

Français

Retrait des batteries à la fin de la durée de vie du produit

Español

Extracción de la pila al finalizar la vida útil del producto

Português

Remoção da bateria no fim da vida útil do produto

Italiano

Eliminazione delle batterie alla fine del ciclo di vita del prodotto

Nederlands

Het verwijderen van batterijen aan het eind van de nuttige levensduur van het apparaat

Dansk

Udtagelse af batteriet efter endt levetid

Norsk

Fjerning av batteriet ved slutten av apparatets levetid

Svenska

Att avlägsna batteriet när produkten är uttjänt

Suomi

Akun irrottaminen laitteen käyttöön loputtua