

BRAUN

6680

6640

6620



FreeGlider

Type 5710
Type 5709
Type 5708



Braun Infoline



Deutsch	4
Was tun, wenn ...	10
Garantie	96
English	11
What to do if ...	17
Guarantee	96
Français	18
Que faire si ...	24
Garantie	96
Español	25
Que hacer si ...	31
Garantía	97
Português	32
O que fazer se ...	38
Garantia	97
Italiano	39
Che cosa fare se ...	45
Garanzia	98
Nederlands	46
Wat moet ik doen als ...	52
Garantie	98
Dansk	53
Hvad skal jeg gøre, hvis ...	59
Garanti	98
Norsk	60
Hva kan gjøres om ...	66
Garanti	98
Svenska	67
Vad du kan göra om ...	73
Garanti	99
Suomi	74
Mitä tehdä, jos ...	80
Takuu	99
Türkçe	81
Eğer aşağıdakilerden birisi gerçekleşir ise ne yapmalı?	87
Ελληνικά	88
Τι κάνετε εάν ...	94
Εγγύηση	99

- (D)** Haben Sie Fragen zu diesem Produkt?
Rufen Sie an: (in Deutschland und Österreich zum Nulltarif)
00 800 27 28 64 63
00 800 BRAUNINFOLINE
- (CH)** **08 44 - 88 40 10**
- (E)** Servicio al consumidor para España:
9 01-11 61 84
- (P)** Serviço ao Consumidor para Portugal:
808 20 00 33
- (I)** Servizio consumatori:
(02) 6 67 86 23
- (NL)** Heeft u vragen over dit product?
Bel Braun Consumenten-infolijn:
(070) 4 13 16 58
- (B)** Vous avez des questions sur ce produit ?
Appelez Braun Belgique
(02) 711 92 11
- (DK)** Har du spørgsmål om produktet? Så ring
70 15 00 13
- (N)** Spørsmål om dette produktet? Ring
88 02 55 03
- (S)** Frågor om apparaten? Ring Kundservice
020 - 21 33 21
- (FIN)** Onko Sinulla kysyttävää tuotteesta? Soita
0203 77877
- (TR)** Türkiye'deki Tüketici Danışma Servisi:
0 800 261 19 53

Internet:

www.braun.com

FreeGlider

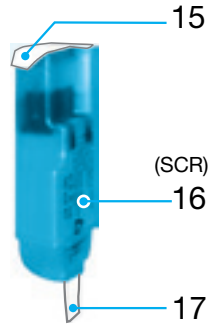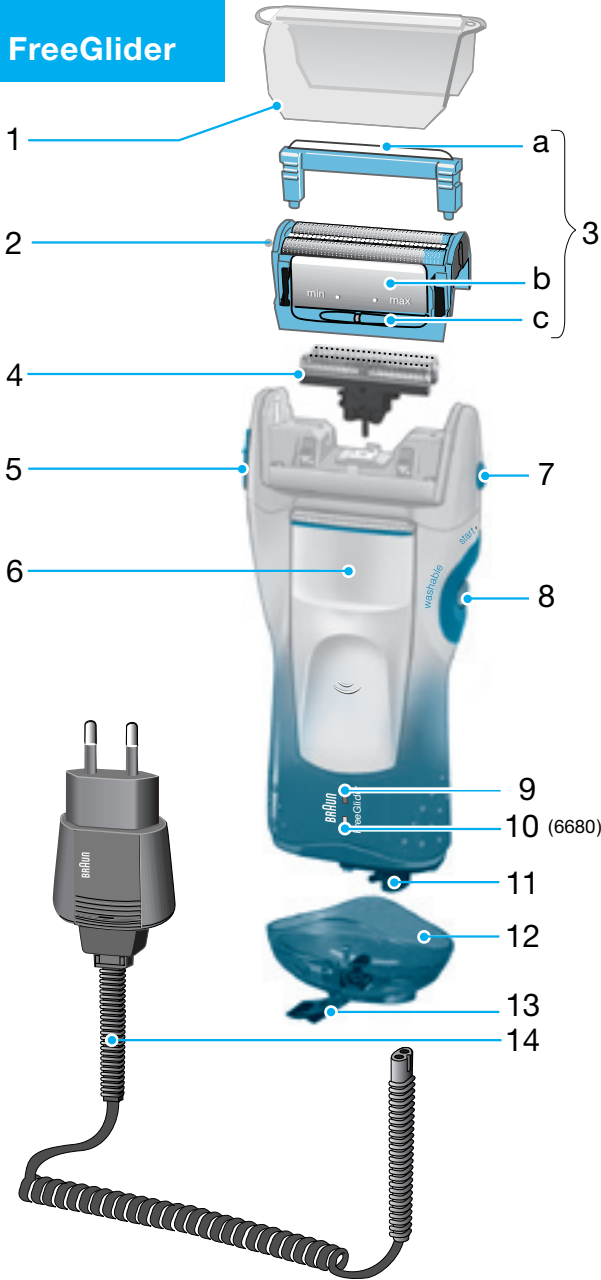

Ingredients:
SD alcohol 40-B
(alcohol denat.),
C12-13 Alkyl Lactate,
Bisabolol,
Tocopheryl Acetate,
Lecithin, Parfum
Ident.Nr. 5337

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun shaver.

The Braun FreeGlider is a shaver which automatically applies a Shaving Conditioner during shaving. The shaver is washable.

Warning

- The Shaving Conditioner contains approx. 90% alcohol. Highly flammable. Keep locked up. Keep out of the reach of children. Keep away from sources of ignition – no smoking.
- Your shaver is provided with a low voltage adapter. Therefore you must not exchange or manipulate any part of it. Otherwise there is risk of electric shock.

Technical specifications

Wattage via cord set: 7 W




Automatic power supply: 100–240 V \approx / 50–60 Hz

Description

- 1 Foil protection cap
- 2 Foil frame
- 3 GlideControl
 - a) exchangeable applicator
 - b) distancing bar
 - c) scale
- 4 Cutterblock
- 5 Head lock
- 6 Long hair trimmer
- 7 Foil frame release button
- 8 Start/stop button
- 9 Charging light (green)
- 10 Low-charge light (red, model 6680 only)
- 11 Shaver socket
- 12 Cover
- 13 Cover latch
- 14 Special power supply cord set
- 15 Sealing foil
- 16 Cartridge with Shaving Conditioner (SCR)
- 17 Pull-out tag



Charging the shaver

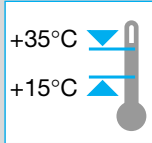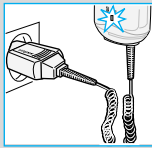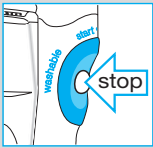

- When the shaver is completely discharged, you cannot know if it is switched on or not. When you connect the shaver to the mains, make sure the green charging light illuminates. If it does not, push the start/stop button (turning off the shaver). The shaver is only charging when the green light is on.
- **First charging:** Using the power supply cord set, connect the shaver to the mains and charge it for at least 4 hours (shaver and adapter might get warm). Once the shaver is completely charged, shave without the cord until fully discharged. Then recharge to full capacity again (subsequent charges will take about 1 hour).
- A full charge will give up to 50 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- Best environmental temperature range for charging is 15 °C to 35 °C.

Indicator lights

The green charging light shows that the shaver is being charged. When the rechargeable battery is fully charged, the charging light goes off. If later on, the charging light comes on again, this indicates that the shaver is being recharged to maintain its full capacity.


Model 6680 only: The red low-charge light glows when the battery capacity has dropped below 20%, provided the shaver is switched on. The remaining capacity will then be sufficient for 2 to 3 shaves.

Preserving the cell unit

In order to maintain the optimum capacity of the rechargeable battery, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity again. Do not expose the shaver to temperatures of more than 50°C for longer periods of time.

Shaving with the cord

If the rechargeable battery is discharged, you may also shave with the shaver connected to the mains via the power supply cord set (if the shaver does not run immediately, turn it off and charge for approx. 1 minute). Then shave with the cord connected.

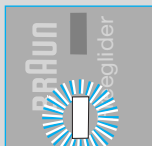

Inserting the cartridge

- Disconnect the power supply cord from the shaver.
- Open latch and pull away cover.
- If necessary, remove old cartridge by its pull-out tag.
- Remove sealing foil from new cartridge.
- Insert cartridge as shown, push firmly.
- Put cover in place and close latch.

- Only use original Braun cartridges.
- Depending on scale setting and your personal shaving habits, one cartridge will last for approximately 15 shaves.
- Do not attempt to refill cartridges.
- The cartridge can be removed and re-inserted later. In that case a small loss of liquid might occur. While travelling, do not take an unsealed cartridge along nor leave one in the shaver.

Shaving




GlideControl allows you to choose the amount of Shaving Conditioner you want to apply («min-max»): When you raise the distancing bar (moving the scale to «min»), the applicator will have less contact with your skin and will apply less Shaving Conditioner. If you move the scale to «max», more Conditioner will be applied.


Please be aware that, in order to optimally pre-condition your skin, during the first seconds somewhat more Conditioner will be applied.

Before shaving you should not use moisturizing creme or lotions, as they might impair the effectiveness of the applicator. No need to restrict the use of After Shave or Eau de Toilette.

Turning on the shaver («start»):


The pivoting cutting system automatically adjusts to every contour of your face.

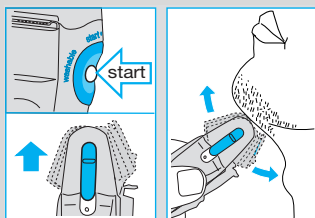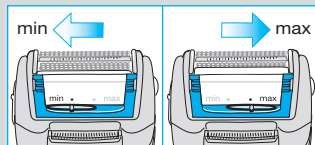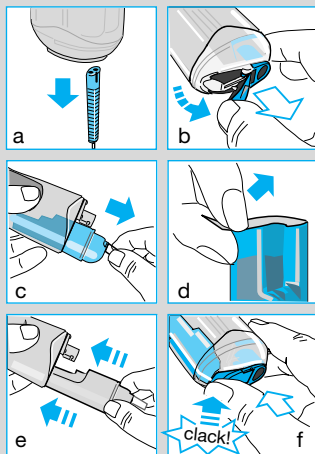

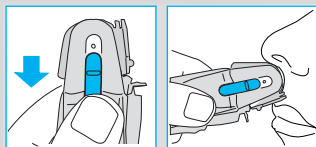


Head lock:

Shaving in difficult areas (e.g. under the nose) will be facilitated if the shaving head is locked.

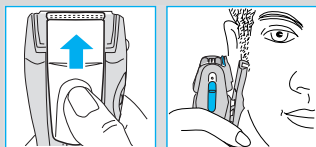

Trimmer:

When the long hair trimmer is activated, it allows the controlled trimming of moustache or sideburns.

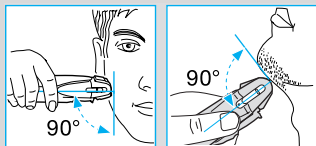

Tips for the perfect shave

- How much Shaving Conditioner you want to apply depends on your type of skin: wet skin might require more Shaving Conditioner. You may want to try out different scale positions.
- Hold the shaver at right angles (90°) to the skin. Stretch your skin and shave against the direction of beard growth.
- To ensure optimum shaving performance, we recommend to replace the foil frame and cutter block every 18 months, or when the parts are worn.

Keeping your shaver in top shape

Important: When the foil frame is removed, do not turn on the shaver. Shaving Conditioner would leak.

Daily cleaning




After each shave, you should hold the shaver – turned on and with its foil frame attached – upside down under running hot water.

General cleaning

Occasionally you should, while the shaver is turned off, remove the foil frame, and, using the brush, clean the cutter block and the inner area of the shaver head. Replace foil frame, ensuring both sides click audibly into place. Shaving Conditioner could leak.

Note








When cleaning under running water, water may condensate inside the shaver's cartridge chamber. This has no effect on the shaver's operation and will disappear after a while

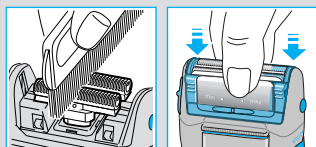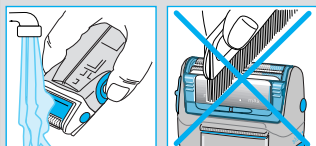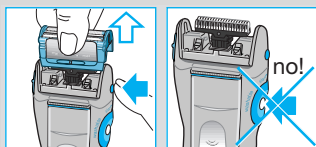

Changing the applicator

The applicator is subject to wear. You should exchange it when in the course of time you feel that less Shaving Conditioner is applied. Replacement applicators come with Shaving Conditioner refill cartridges (see «accessories»).

- Remove the foil frame.
- Lift old applicator at the notch on one side, then the other.
- Remove old applicator and dispose.
- Place new applicator on the foil frame, leaving a small gap.
- With both thumbs push applicator right and left until it clicks into place.
- Replace foil frame, ensuring both sides click audibly into place.

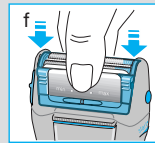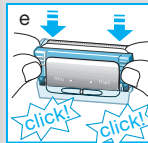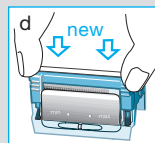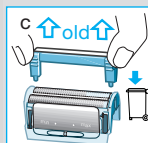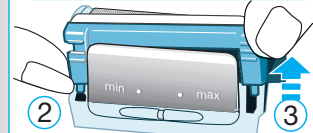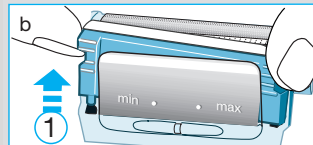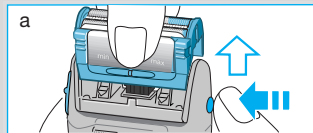

Replacing the shaving parts

The shaver foil and cutter block are precision parts that, in time, are subject to wear. Replace your foil frame and cutter block every 18 months and get a 25% better shave.*

(Foil frame and cutter block: FreeGlider)

* (Overall evaluation from Braun users comparing their shave with new parts and those used for 18 months.)


Accessories

Available at your dealer or Braun Service Centres:

- Foil frame and cutter block (FreeGlider)
- Cartridge with Shaving Conditioner (SCR)



Environmental notice

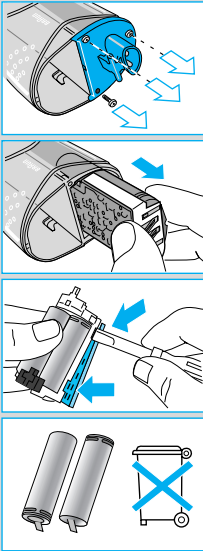

This appliance is provided with nickel-hydride rechargeable batteries. To protect the environment, do not dispose of the complete appliance in the household waste at the end of its useful life. Open the housing as shown, remove and dispose of the batteries at your retail store or at appropriate collection sites according to national or local regulations.

The empty cartridge of the Shaving Conditioner can be disposed in the household waste.

Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



What to do if ...

Problem	Situation	Solution
Shaving Conditioner is leaking	Foil frame replaced incorrectly	Remove foil frame and attach once more, ensuring both sides click audibly into place. If needed, clean both foil frame and shaver head.
	<i>or</i> Applicator replaced incorrectly	Place new applicator on the foil frame, leaving a small gap. With both thumbs push applicator right and left until it clicks into place.
	<i>or</i> Shaver was switched on with foil frame removed	Do not switch on when foil frame is removed.
	<i>or</i> Cartridge was removed immediately after use	Do not remove cartridge immediately after use.
None, or too little Shaving Conditioner dispensed with new shaver	No cartridge inserted	Insert cartridge.
	<i>or</i> Sealing foil not removed from cartridge	Remove sealing foil.
	<i>or</i> Scale positioned at «min»	Move scale.
None, or too little Shaving Conditioner dispensed after longer use	Applicator clogged	Replace applicator (before shaving do not use moisturising creme or lotion).
	<i>or</i> Cartridge empty	Insert new cartridge.
Skin is red or burns	Skin is not used to Shaving Conditioner	Conditioner contains alcohol. Sensitive skin might require 1 to 2 weeks to get accustomed. If your skin shows signs of intolerance, discontinue using the Shaving Conditioner.
Shaver is connected to the mains, but is not charging (green LED does not light up)	Shaver is completely discharged	Leave shaver connected to the mains, push start/stop button once. Shaver will be charging when green LED lights up.
Shaving head does not swivel	Head lock activated	Release head lock.
Cartridge cannot be removed	Pull-out tag was accidentally removed from cartridge	Use appropriate tool (flat-nose pliers) to pull out cartridge. When inserting a new cartridge, only remove the silver sealing foil. Do not remove the transparent pull-out tag.
Water condensation inside the cartridge compartment	Differences in temperature when cleaning with water	Condensation will disappear after a while and has no effect on the shaver's operation. The electronics section is sealed against water.

Deutsch

Garantie

Als Hersteller übernehmen wir für dieses Gerät – **nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer** – eine Garantie von 2 Jahren ab Kaufdatum. Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen. Die Garantie kann in allen Ländern in Anspruch genommen werden, in denen dieses Braun Gerät von uns autorisiert verkauft wird.

Von der Garantie sind ausgenommen: Schäden durch unsachgemäßen Gebrauch, normaler Verschleiß und Verbrauch sowie Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen. Bei Eingriffen durch nicht von uns autorisierte Braun Kundendienstpartner sowie bei Verwendung anderer als Original Braun Ersatzteile erlischt die Garantie.

Im Garantiefall senden Sie das Gerät mit Kaufbeleg bitte an einen autorisierten Braun Kundendienstpartner. Die Anschrift für Deutschland können Sie kostenlos unter 00800/27 28 64 63 erfragen.

English

Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are under-

taken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

For UK only:

This guarantee in no way affects your rights under statutory law.

France

Garantie

Nous accordons une garantie de 2 ans sur ce produit, à partir de la date d'achat. Pendant la durée de la garantie, Braun prendra gratuitement à sa charge la réparation des vices de fabrication ou de matière en se réservant le droit de décider si certaines pièces doivent être réparées ou si l'appareil lui-même doit être échangé. Cette garantie s'étend à tous les pays où cet appareil est commercialisé par Braun ou son distributeur exclusif.

Cette garantie ne couvre pas : les dommages occasionnés par une utilisation inadéquate et l'usure normale. Cette garantie devient caduque si des réparations ont été effectuées par des personnes non agréées par Braun et si des pièces de rechange ne provenant pas de Braun ont été utilisées.

Pour toute réclamation intervenant pendant la période de garantie, retournez ou rapportez l'appareil ainsi que l'attestation de garantie à votre revendeur ou à un Centre Service Agréé Braun.

Appelez au 01.47.48.70.00 pour connaître le Centre Service Agréé Braun le plus proche de chez vous.

Clause spéciale pour la France

Outre la garantie contractuelle exposée ci-dessus, nos clients bénéficient de la garantie légale des vices cachés prévue aux articles 1641 et suivants du Code civil.