

BRAUN

5691 



Flex XP System

www.braun.com/register

Type
5722
+
5325

 
 
 
 
 
 
 


 
 
 
 
 
 
Braun Infoline

Deutsch	6, 47, 51
English	9, 47, 51
Français	12, 47, 51
Español	16, 48, 51
Português	19, 48, 51
Italiano	22, 48, 51
Nederlands	25, 49, 51
Dansk	28, 49, 51
Norsk	31, 49, 51
Svenska	34, 50, 51
Suomi	37, 50, 51
Türkçe	40, 51
Ελληνικά	43, 50, 51

- D** Haben Sie Fragen zu diesem Produkt?
- A** Rufen Sie an (gebührenfrei):
00 800 27 28 64 63
00 800 BRAUNINFOLINE
- CH** **08 44 - 88 40 10**
- E** Servicio al consumidor para España:
9 01-11 61 84
- P** Serviço ao Consumidor para Portugal:
808 20 00 33
- I** Servizio consumatori:
(02) 6 67 86 23
- NL** Heeft u vragen over dit produkt?
Bel Braun Consumenten-infolijn:
(070) 4 13 16 58
- B** Vous avez des questions sur ce produit ?
Appelez Braun Belgique
(02) 711 92 11
- DK** Har du spørgsmål om produktet? Så ring
70 15 00 13
- N** Spøsmål om dette produktet? Ring
22 63 00 93
- S** Frågor om apparaten? Ring Kundservice
020 - 21 33 21
- FIN** Onko Sinulla kysyttävää tuotteesta? Soita
0203 77877
- TR** Müşteri Hizmetleri Merkezi:
0212 - 473 75 85

A 5691

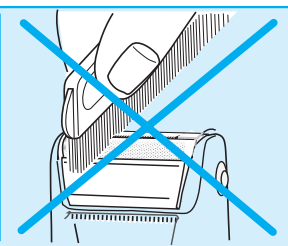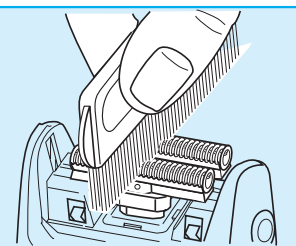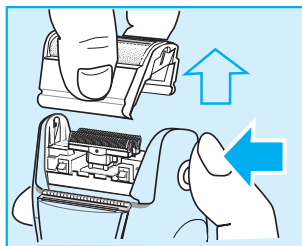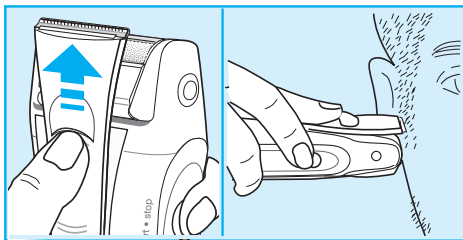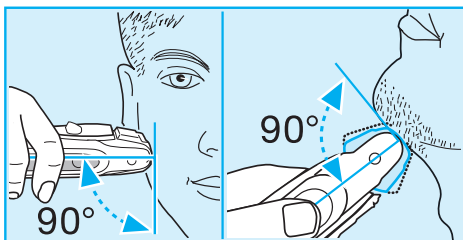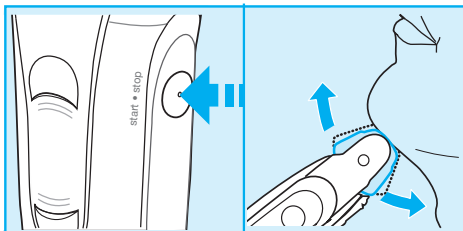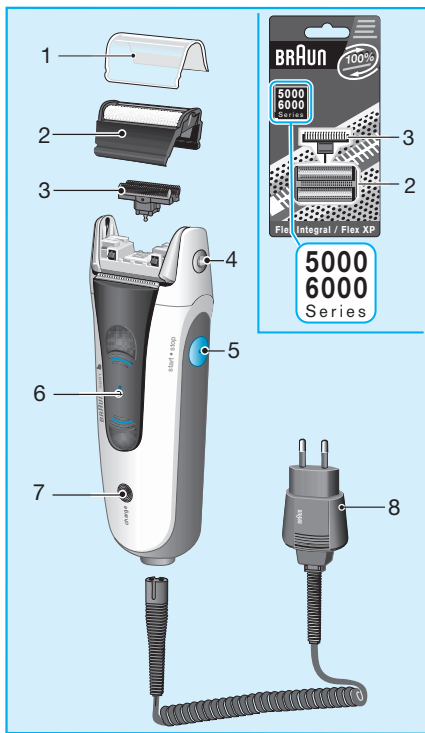

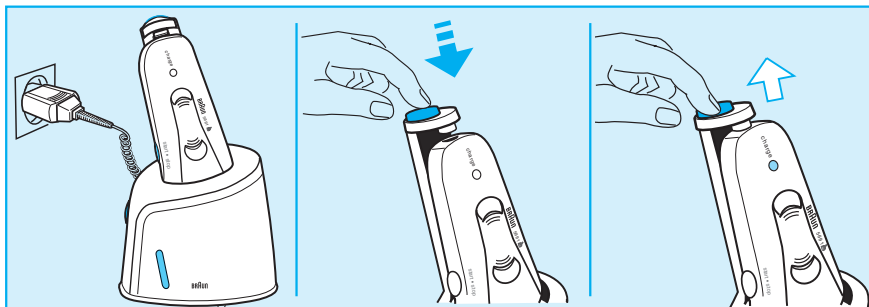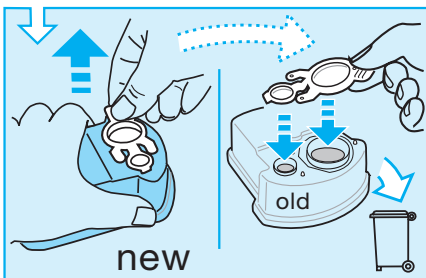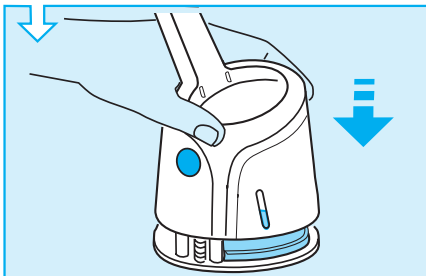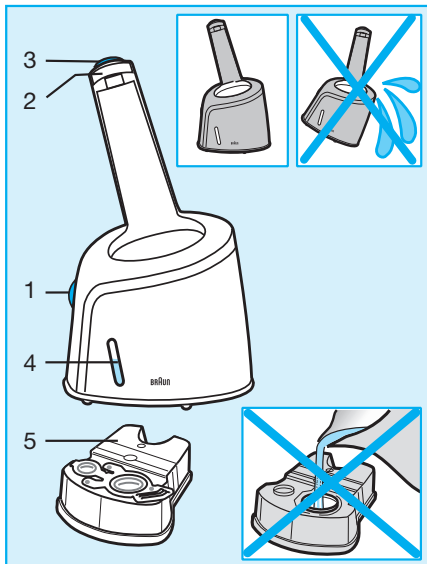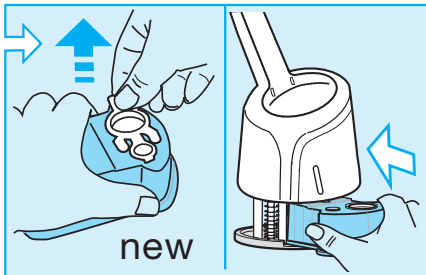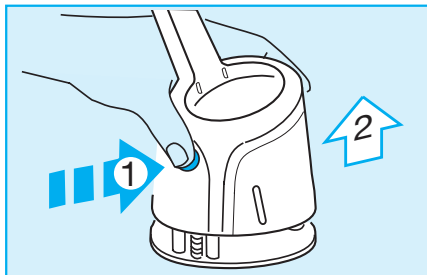

English

A Shaver

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun shaver.

Warning

Your shaver is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is a risk of electric shock.

Description

- 1 Foil protection cap
- 2 Shaver foil
- 3 Cutter block
- 4 Release button
- 5 On/off switch («start/stop»)
- 6 Long hair trimmer
- 7 Charging light (green)
- 8 Special cord set

Charging the shaver

- Using the special cord set, charge the shaver directly off the mains for at least 4 hours (shaver and special cord set might get warm).
- With normal use the shaver will be charged automatically after every cleaning in the Clean&Charge (see section B).
- The green charging light indicates that the shaver is being charged.
- A full charge will give up to 40 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- Best environmental temperature range for charging is 15 °C to 35 °C.
- When fully discharged, you may also shave with the shaver connected to the mains via the special cord set.

Shaving

Turn on the shaver («start»):
The pivoting cutting system automatically adjusts to every contour of your face.

Trimmer:

When the long hair trimmer is activated, it allows the controlled trimming of moustache or sideburns.

Tips for the perfect shave

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin. Stretch the skin and shave against the direction of beard growth.
- To maintain 100% shaving performance, replace your foil and cutter block every 18 months or when worn.

Keeping your shaver in top shape

Automatic cleaning

Your shaver should be cleaned daily in the Clean&Charge.

Once the shaver is put into in the Clean&Charge, it is cleaned automatically (see section B). Manual cleaning is recommended only when the Clean&Charge is not available, e.g. when travelling.

Manual cleaning

Always unplug the appliance before cleaning. Remove the shaver foil (shaver head must be in central position) and, using the brush, clean the cutter block and the inner area of the shaver head. Do not clean the shaver foil with the brush.

When cleaning the shaver under running water, make sure it is completely dry before putting it into the Clean&Charge.

Replacing the shaving parts

To maintain 100% shaving performance, replace your foil and cutter block every 18 months or when worn. Change both parts at the same time for a closer shave with less skin irritation.

(Shaver foil and cutter block:
part no. 5000/6000)

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (through normal use) every 6 months approximately. Then recharge the shaver to full capacity. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Environmental notice


This appliance is provided with nickel-cadmium rechargeable batteries. To protect the environment, do not dispose of the appliance in the household waste at the end of its useful life. Open the housing as shown on page 45, remove and dispose of the batteries at your retail store or at appropriate collection sites according to national or local regulations.

B Clean&Charge

Braun Clean&Charge has been developed for cleaning, charging and storing your shaver. Clean your shaver daily in the Clean&Charge.

During the automated cleaning process, the shaver is switched on and off at intervals to obtain best cleaning results. Since the specially formulated cleaning fluid contains a small amount of oil, the cleaning procedure also fulfills the lubrication needs of the shaver.

Important

- Only use the special cord set supplied with the shaver.
- In order to avoid any leakage of the cleaning fluid, place the appliance on a flat, stable surface. Do not tip, move suddenly or transport in any way if a cleaning cartridge is installed.
- Do not place the appliance in a mirror cabinet, nor store it over radiators, nor place it on polished or laquered surfaces. Do not expose to direct sunlight.
- The appliance contains highly flammable liquid. Keep it away from sources of ignition. No smoking. Keep out of reach of children. Do not refill cartridge. Use only original Braun refill cartridge. 
- When cleaning the shaver, its protection cap should be removed.

Description

- 1 Lift button for cartridge exchange
- 2 Contact bow
- 3 Start/release button
- 4 Level indicator
- 5 Cleaning cartridge

Before using Clean&Charge

Installing the cartridge

- Press the lift button (1) to open the housing.
- Hold the cartridge down on a flat, stable surface (e.g. table). Carefully remove the lid

from the cartridge. Slide the cartridge into the base as far as it will go.

- Slowly close the housing by pushing it down until it locks.

Replacing the cartridge

After having pressed the lift button to open the housing, wait for a few seconds before removing the used cartridge.

Before discarding the used cartridge, make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution. The used cartridge can be disposed in the household waste.

Operating your Clean&Charge

- Connect your Clean&Charge with the special cord set to the mains electricity supply. The special socket at the back is adjustable to save space. After each shave, switch the shaver off and put it into the Clean&Charge, upside down and with the front showing.
- Push the start/release button (3) to lock and connect the shaver. The cleaning process will start (approx. 5 minutes cleaning, 4 hours drying).
- Do not interrupt the cleaning process, as it leaves the shaver wet and not fit for use. If interruption is needed nonetheless, press the start/release button (3).
- After 4 hours the process is finished and the shaver is ready for use. To release it, push the start/release button.
- A cleaning cartridge should be sufficient for about 30 cleaning cycles. When the level indicator (4) has reached the «min» mark, the remaining fluid in the cartridge is sufficient for about 5 more cleaning cycles. Then the cartridge should be replaced, when used daily approx. every 4 weeks.
- The hygienic cleaning solution cartridge

contains alcohol which, once opened, will naturally evaporate slowly into the surrounding air. Each cartridge, if not used daily should be replaced after approx. 8 weeks.

 
- Clean the housing from time to time with a damp cloth, especially the opening where the shaver rests.

Subject to change without notice.

This product conforms to the EMC-Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



Electric specifications see printing on the special cord set.

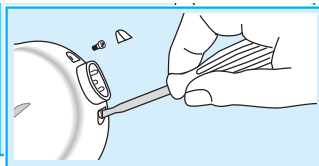

Deutsch

Akku-Entsorgung am Ende der Lebensdauer des Gerätes

Vorsicht! Durch das Öffnen wird das Gerät zerstört. Keine Garantie für ein geöffnetes Gerät.

English

Battery removal at the end of the product's useful life

Caution: Opening the handle will destroy the appliance and invalidate the guarantee.

Français

Retrait des batteries en fin de vie du produit

Attention : L'ouverture du corps du rasoir entraînera sa destruction et invalidera la garantie.

Español

Batería extraíble al final de su periodo vida

Precaución: la manipulación puede ocasionar daños a la afeitadora e invalidar la garantía.

Português

Bateria substituída no fim do ciclo de vida do produto

Precaução: Se abrir a Máquina irá destruí-la e invalidar a sua garantia.

Italiano

Eliminazione delle batterie alla fine del ciclo di vita del prodotto

Attenzione: l'apertura del corpo motore distrugge lo strumento ed invalida la garanzia del prodotto.

Nederlands

 
Het verwijderen van de batterij aan het eind van de nuttige levensduur van het apparaat

Let op: Door het openen van het apparaat wordt deze vernietigd en vervalt de garantie.

Dansk

Fjern batterierne når produktet er slidt op

Advarsel: Hvis du åbner shaveren ødelægges denne og garantien dækker ikke.

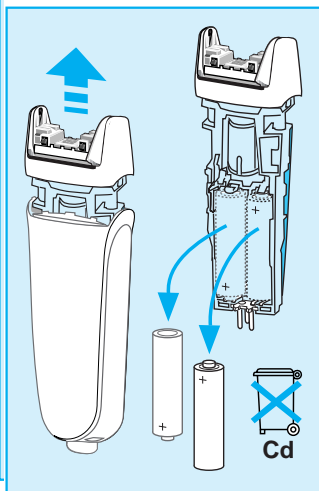

Deutsch

Garantie

Als Hersteller übernehmen wir für dieses Gerät – **nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer** – eine Garantie von 2 Jahren ab Kaufdatum. Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen. Die Garantie kann in allen Ländern in Anspruch genommen werden, in denen dieses Braun Gerät von uns autorisiert verkauft wird.

Von der Garantie sind ausgenommen: Schäden durch unsachgemäßen Gebrauch, normaler Verschleiß und Verbrauch sowie Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen. Bei Eingriffen durch nicht von uns autorisierte Braun Kundendienstpartner sowie bei Verwendung anderer als Original Braun Ersatzteile erlischt die Garantie.

Im Garantiefall senden Sie das Gerät mit Kaufbeleg bitte an einen autorisierten Braun Kundendienstpartner. Die Anschrift für Deutschland können Sie kostenlos unter 00800/27 28 64 63 erfragen.

English

Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

For UK only:

This guarantee in no way affects your rights under statutory law.

France

Garantie

Nous accordons une garantie de 2 ans sur ce produit, à partir de la date d'achat. Pendant la durée de la garantie, Braun prendra gratuitement à sa charge la réparation des vices de fabrication ou de matière en se réservant le droit de décider si certaines pièces doivent être réparées ou si l'appareil lui-même doit être échangé. Cette garantie s'étend à tous les pays où cet appareil est commercialisé par Braun ou son distributeur exclusif.

Cette garantie ne couvre pas : les dommages occasionnés par une utilisation inadéquate et l'usure normale. Cette garantie devient caduque si des réparations ont été effectuées par des personnes non agréées par Braun et si des pièces de rechange ne provenant pas de Braun ont été utilisées.

Pour toute réclamation intervenant pendant la période de garantie, retournez ou rapportez l'appareil ainsi que l'attestation de garantie à votre revendeur ou à un Centre Service Agréé Braun.

Appelez au 01.47.48.70.00 pour connaître le Centre Service Agréé Braun le plus proche de chez vous.

Clause spéciale pour la France

Outre la garantie contractuelle exposée ci-dessus, nos clients bénéficient de la garantie légale des vices cachés prévue aux articles 1641 et suivants du Code civil.