

## ENGLISH

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

### DANGER

To reduce the risk of electric shock:

- Do not reach for a Shaper that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store Shaper where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Always unplug this Shaper from the electrical outlet immediately after using, except when Shaper is (re)charging.
- Unplug Shaper before cleaning.

- When **discarding** Shaper, unplug Shaper and remove rechargeable battery. See Battery Removal instruction sheet.

### WARNING


To reduce the risk of burns, fire, electric shock or injury to persons:

- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this Shaper for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
- Never operate this Shaper if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the Shaper to an Authorized Norelco Service Location for examination and repair.
- Keep the Shaper and cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not operate, charge or plug in Shaper outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this Shaper with a damaged or broken specialty Hi-Definition Trimmer or mini-foil, as facial injury may occur.
- Always attach plug to Shaper first, then to outlet. To disconnect, turn on/off switch to "OFF" position (switch is down), then remove plug from outlet.
- To prevent possible damage to the cord, do not wrap cord around the Shaper.
- Never put Shaper in direct sunlight or store at a temperature above 140°F.
- This Shaper is for use on human facial hair only. Do not use this Shaper for any other purpose.
- Always store your Shaper and adaptor in a moisture-free area. Make sure the cord is disconnected from the Shaper.

## SAVE THESE INSTRUCTIONS

**IMPORTANT: YOUR SHAPER CONTAINS A NICKEL-CADMIUM RECHARGEABLE BATTERY.** See Battery Removal instruction sheet.

## FEATURES

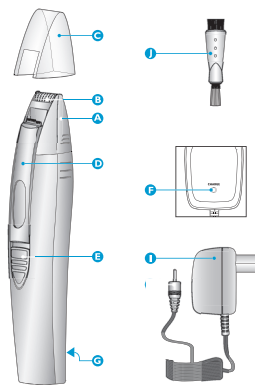

- A. Removable Shaving Head
- B. Shaving mini-foil
- C. Protective Cap
- D. Specialty Hi-Definition Trimmer
- E. On/Off Switch
- F. Charging Indicator Light
- G. Power Cord Socket
- H. Power Cord
- I. Adaptor
- J. Cleaning Brush
- K. Full Two-Year Warranty
- L. 60-Day Money-Back Guarantee

### To Charge/Recharge

- ▶ (Re)charging requires 10 full hours.
- ▶ Use only the cord provided.
- ▶ Battery performance is best if you recharge only when the battery is (almost) completely empty.
- ▶ Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of the battery.
- ▶ Continuously recharging Shaper will reduce life of battery.

- Be certain Shaper is OFF.
- Connect the power cord plug to Shaper (Fig. 1).



Do not charge Shaper for more than 24 hours.

- Plug adaptor into any 120V AC outlet. Use only the cord provided.

- Green Charging Indicator Light on the adaptor will go on to indicate the Shaper is charging (Fig. 2). A full charge takes approximately 10 hours for up to 40 minutes of cordless operation.



- Remove the adaptor from the electrical outlet and disconnect the power cord plug from the Shaper.

- When the battery is empty, recharge the appliance for 10 hours. The Shaper does not operate directly from the electrical outlet. If you want to style your facial hair when the battery is empty, charge the appliance at least 90 minutes to ensure enough power for the one styling session.

### Optimize the working life of the battery

After the Shaper has been charged for the first time, do not recharge it between styling sessions. Continue using it until the battery is almost completely empty.

- ▶ Discharge the battery completely twice a year by letting the motor run until it stops. Then recharge the battery for at least 10 hours.
- ▶ Do not charge the appliance for more than 24 hours.
- ▶ Do not keep cord permanently plugged into the electrical outlet.
- ▶ If Shaper hasn't been used for a long period of time, it must be recharged for a full 10 hours.

### D-Finer Precise Shaper with Dual Defining Technology

Put it to the test. Like many new products, your Norelco D-Finer Precise Shaper may take a little getting used to. So take the time to get acquainted with the two-step shaping and finishing process. Use the narrow specialty Hi-Definition Trimmer to shape your beard, even in the smallest areas. Then follow-up with the narrow shaving mini-foil to shave along the edges and eliminate any stubble to create a smooth and clean contoured beard line.

Use the D-Finer Precise Shaper in addition to your beard trimmer and razor to create and maintain the beard shape that defines your personal style. The unique ergonomic design makes it easy to see exactly what you're doing so you get precisely the look you want.

### Before You Begin

Preparing your beard for shaping

Follow these steps to prepare your beard.

- Use a Norelco beard and moustache trimmer to trim your beard (Fig. 3).



- Use a Norelco razor to shave larger areas of the skin (Fig. 4).



### Shaping

Now you can shape and define your facial hair style.

Use the D-Finer Precise Shaper on a clean, dry face. Do not use any type of lotion or cream before using.

Use the Precise Shaper only for its intended household use as described in this manual.

- Slide the specialty Hi-Definition Trimmer out until you hear a "click" and the Hi-Definition Trimmer snaps into position. You will see the slide-out mark (Fig. 5).



The slide-out mark is hidden underneath the specialty Hi-Definition Trimmer and only becomes visible when the specialty Hi-Definition Trimmer has been slid out correctly and "clicks" into position.

- Switch the D-Finer Precise Shaper ON.

- Shape the contours of your beard and sideburns with the specialty Hi-Definition Trimmer.

- To contour most effectively, place the flat surface of the specialty Hi-Definition Trimmer in contact with the skin and move it against the direction of hair growth (Fig. 6).



- Make well-controlled movements. Touch the hair lightly with the specialty Hi-Definition Trimmer.

**NOTE:** Since all hairs do not grow in the same direction, you may want to try different contouring positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

For additional styles and defining tips, visit our website: [www.norelco.com/d-finer](http://www.norelco.com/d-finer).

When you have created your desired beard contour, slide the specialty Hi-Definition Trimmer back down to its original position.

### Finishing

- Finally, use the narrow shaving mini-foil to shave along the contour edges to remove any stubble while creating a smooth clean beard line (Fig. 7).



Before using mini-foil, always check mini-foil for wear or damage. If mini-foil shows signs of wear or damage, do not use shaver as injury may occur. Do not use until mini-foil has been replaced.

Gently press the shaving mini-foil to the skin. Do not press too hard.

To maintain a shape, use the shaving mini-foil to shave along the edges to provide a smooth and clean beard line.

- Switch the D-Finer Shaper OFF. Put on the protective shaving head cap to protect the specialty Hi-Definition Trimmer and the shaving mini-foil.

### CLEANING

- ▶ Always switch D-Finer Precise Shaper off before cleaning.
- ▶ Do not use abrasives, scourers or liquids such as alcohol, benzene, bleach or acetone to clean the D-Finer Shaper.
- ▶ Never clean the specialty Hi-Definition Trimmer or shaving mini-foil with the motor ON.

- ▶ Do not apply pressure to specialty Hi-Definition Trimmer or shaving mini-foil. Do not touch specialty Hi-Definition Trimmer or shaving mini-foil with hard objects as this may damage them.
- ▶ Do not use while bathing, showering or immerse the D-Finer in water or other liquids as damage to D-Finer Shaper may occur.
- ▶ Clean cut hairs from D-Finer Shaper as they accumulate during use.
- ▶ Always clean D-Finer Shaper after each use and before storing.

- Make sure D-Finer Shaper is switched OFF and disconnected from the electrical outlet.
- Make sure the specialty Hi-Definition Trimmer is down in its original position.

- Remove the removable shaving head by pulling it off the D-Finer body (Fig. 8).
- Shake or blow cut hairs from the shaving head. Carefully clean the cutting unit and the shaving head and body of the D-Finer Shaper with the brush supplied.



- Put on the protective shaving head cap to protect the specialty Hi-Definition Trimmer and the shaving mini-foil (Fig. 9).



**Important:** Do not clean the shaving mini-foil with the brush. The brush may damage the shaving mini-foil.

- Put on the protective shaving head cap to protect the specialty Hi-Definition Trimmer and the shaving mini-foil (Fig. 9).



### Replacing The Shaving Mini-foil

If the shaving mini-foil is worn or damaged, do not continue using the appliance. Replace the shaving mini-foil immediately.

A worn or damaged shaving mini-foil should only be replaced with an original Philips shaving mini-foil, which is available at an authorized Norelco Service Location.

- Remove the detachable shaving head by pulling it from the appliance (fig. 10).



- Remove the shaving mini-foil by pushing it out of the shaving head (fig. 11).



- Place the new shaving mini-foil carefully in the shaving head (fig. 12).



- When the shaving mini-foil is properly positioned, push it into its end position with your finger (fig. 13).



### Replacing The Mini-foil Cutter

The mini-foil cutter is located under the detachable shaving head.

Do not switch the appliance on when replacing the mini-foil cutter.

## NORELCO 60-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Norelco D-Finer Precise Shaper, send the product back and we'll refund you the full purchase price.

The D-Finer Precise Shaper must be shipped prepaid by insured mail, insurance prepaid, and have the sales receipt, indicating purchase price and the date of purchase, enclosed. The D-Finer Precise Shaper must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the D-Finer Precise Shaper and limit refunds not to exceed suggested retail price.

Send dated sales receipt, your complete name and address as indicated below, and the D-Finer Precise Shaper, prepaid to:

**Norelco Consumer Products Company**  
A Division of Philips Electronics  
North America Corporation  
450 North Medinah Road, Dock 16  
Roseville, IL 60172-2329

Please allow 4-6 weeks for delivery of check.

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_ Zip \_\_\_\_\_

Daytime Telephone No. (\_\_\_\_) \_\_\_\_\_

Email Address: \_\_\_\_\_

REASON FOR RETURNING: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

If the mini-foil cutter is worn or damaged, do not continue using the appliance. Replace the mini-foil cutter and the shaving mini-foil immediately.

A worn or damaged mini-foil cutter should only be replaced with an original Philips cutter, which is available at an authorized Norelco Service Location.

- Remove the detachable shaving head by pulling it from the Shaper (fig. 14).



- Remove the old mini-foil cutter by pulling it from the appliance (fig. 15).



- Make sure that the spring within the driving unit does not get lost.



- Insert the new mini-foil cutter carefully into the driving unit (fig. 16).



- When the mini-foil cutter is properly positioned, push it into its end position with your finger (fig. 17).



- Replace the detachable shaving head on the Shaper.

This shaper has no other user-serviceable parts. Any other service should be performed by an Authorized Norelco Service Location.

### Assistance

For assistance or the Authorized Norelco Service Location nearest you, call toll free:

1-800-243-3050

or for live help online visit our website:

[www.norelco.com](http://www.norelco.com)

Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

### Battery Removal

- ▶ This Norelco D-Finer Shaper contains a rechargeable Nickel-Cadmium battery, which must be disposed of properly.

- ▶ Battery should only be removed when D-Finer Shaper is to be discarded.

- ▶ Refer to Battery Removal instruction sheet for directions on removing the rechargeable battery.

